



RIGEL UNI-THERM

electrosurgical analyser

Rigel Medical 24 Month Warranty Statement

Rigel Medical provides a standard 12-month manufacturer's warranty against breakdown during normal use. This warranty can be upgraded to a 24-month warranty (terms and conditions apply*). Problems caused through misuse, damage, fair wear & tear, consumables and accessories are excluded from standard warranty. Such components found to be being used in excess of their manufacturer's operating recommendations are also excluded. Shipping to an authorised service centre is the responsibility of the sender.

*Terms and Conditions of 24 Month Warranty

The Rigel product must be registered with Rigel Medical within 30 days of purchase to be eligible for the extended 24-month warranty. Instruments must be returned to an authorised service centre complete with proof of purchase within 13 months of purchase for calibration at the current rate. Any items returned for calibration outside of the 13 month period stated above may not be eligible for the second 12 month section of warranty. The second 12 month section of the warranty begins at the expiry of the initial 12 month period, not when the unit is calibrated.

Details correct at time of going to print. The manufacturer retains the right to make amendments to the above terms and conditions without prior notice.

Calibration Statement

The Rigel Uni-Therm Electrosurgical Analyser is fully calibrated and found to be within the specified performance and accuracy at the time of production. The Seaward Group provides its products through a variety of channels; therefore it may be possible that the calibration date on the provided certificate may not represent the actual date of first use.

Experience has indicated that the calibration of this instrument is not effected by storage prior to receipt by the user. We therefore recommend that the recalibration period be based on a 12 month interval from the first date the unit is placed in to service.


Date received into service; / / .

© Copyright 2016

All rights reserved. Nothing from this edition may be multiplied, or made public in any form or manner, either electronically, mechanically, by photocopying, recording, or in any manner, without prior written consent from the SEAWARD GROUP. This also applies to accompanying drawings and diagrams.

Due to a policy of continuous development the SEAWARD GROUP reserves the right to alter the equipment specification and description outlined in this publication without prior notice and no part of this publication shall be deemed to be part of any contract for the equipment unless specifically referred to as an inclusion within such contract.

Disposal of old product

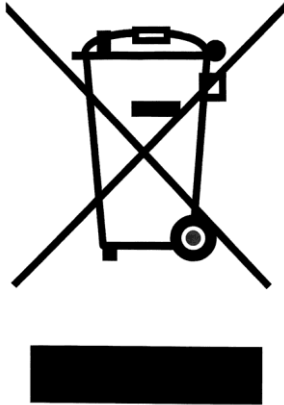

The Rigel Uni-Therm has been designed and manufactured with high quality materials and components, which can be recycled and reused.

Please familiarise yourself with the appropriate local separate collection system for electrical and electronic products or contact your local supplier for further information.

Please dispose of this product according to local regulations. Do not dispose of this product along with normal waste material. By offering your old products for recycling, you will help prevent potential negative consequences for the environment and human health.


Statement of Conformity

This product is manufactured by:

Seaward Electronic Ltd, Bracken Hill, South West Industrial Estate, Peterlee,
County Durham, SR8 2SW, UK

As the manufacturer of the apparatus listed, we declare under our sole responsibility that the product:

Rigel Uni-Therm – Electrosurgical Analyser

Conforms with the relevant Directives and conformity is indicated by the symbol  , i.e. “Conformité Européenne”

Seaward Electronic Ltd. is registered under **BS EN ISO9001** Certificate No.: Q05356.

A copy of the Declaration of Conformity and a copy of our ISO certificate are available in the Support & Resources area of the Seaward website www.seaward.co.uk".

Index

1	<i>Introduction</i>	3
1.1	Analyser Functions	3
1.2	Key Features	4
1.3	Unpacking the Uni-Therm	4
1.4	Optional Accessories	4
1.5	Warnings and Cautions	5
1.6	User Notes	5
1.7	Safety Notes	5
2	<i>Uni-Therm Overview</i>	7
2.1	Simulation panel	8
2.2	Side panel	8
3	<i>Getting started</i>	9
3.1	Connecting your Analyser	9
3.2	Rear panel	9
3.3	Simulation connection panel	9
3.4	Side panel ESU to ESA connections	10
3.5	Home screen	10
4	<i>Manual Mode</i>	11
4.1	Contact Quality Monitoring (CQM) or REM test	11
4.2	HF Leakage	13
4.3	Power Test	15
5	<i>Automatic Mode</i>	21
5.1	Stopping or Failing a Test Sequence	25
6	<i>Data</i>	26
6.1	View Data	27
6.2	Transfer Data	28
6.3	Download Data	28
6.4	Upload Data	30
6.5	Import Power Reference Curves	31
6.6	Transfer Test Sequences	32
7	<i>Bluetooth Favourites</i>	33
8	<i>Setup</i>	35
8.1	Test Sequence	36
8.2	Time Date	41

8.3	Language	41
8.4	Factory Restore.....	42
8.5	About	43
9	<i>Maintaining the Rigel Uni-Therm</i>	44
9.1	Cleaning the Analyser	44
9.2	User Maintenance.....	44
9.3	Firmware Upgrade	44
9.4	Return Instructions.	45
10	<i>Specifications.....</i>	46
10.1	Technical Specification	46
10.2	General Specification	47
10.3	Load Power rating Rigel Uni-Therm	48
11	<i>Support.....</i>	50
11.1	Contact Us	50
12	<i>Appendix A IEC 60601-2-2 Leakage Tests</i>	51
13	<i>Appendix B Additional Leakage Tests</i>	55
14	<i>Appendix C IEC 60601-2-2 Power Tests.....</i>	57
15	<i>Appendix D Creating a power reference curve.....</i>	58
16	<i>Appendix E Firmware Route Map</i>	60

1 Introduction

Thank you for purchasing the Rigel Uni-Therm Electrosurgical Analyser.

The new high performance Rigel Uni-Therm accurately measures the performance of electrosurgical generators. Measurements include; high frequency leakage, high power current and power distribution, and patient return plate alarm testing. A newly designed ultra-low inductive load bank provides highly accurate and stable test conditions at high frequency currents.

Utilising a large, full colour graphical display, the Rigel Uni-Therm is a fully stand-alone electrosurgical analyser that can offer true intuitive, user friendly operation and operator safety.

Tests can be carried out on an individual basis (see [chapter 2](#)) and as part of an automatic sequence (see [chapter 3](#)). Data can be stored, viewed and transferred from within the instrument (see [chapter 4](#)). Customisation of the Rigel Uni-Therm can be carried out in the setup (see [chapter 6](#)).

1.1 Analyser Functions

The Rigel Uni-Therm is able to measure the following parameters both automatically and manually;

- Power Test (W, mA rms, V peak and crest factor)
- HF Leakage (mA rms)
- Peak and Peak to Peak voltage
- Plate Security (CQM) or return electrode monitoring (REM)

For the power test, an internal array of resistors provide a safe variable load of 0-5115 Ω in 5 Ω steps; enabling the production of accurate and detailed power distribution curves, with an instant tabular view of test results.

A unique feature of the HF leakage test is on screen graphics illustrating correct test connection configurations, complete with user set pass fail limits.

The plate security (CQM) test offers a unique isolated, motor driven potentiometer, which provides a continuous swept resistance change; enabling accurate and fast testing of alarms, complete with user set pass fail limits.

Any future firmware upgrade can be efficiently installed by users, without risk to stored data. The new Rigel Uni-Therm forms part of a comprehensive range of high performance specialist biomedical test equipment supplied by Rigel Medical, part of the Seaward Group.

1.2 Key Features

- ✓ Fully compliant with IEC 60601-2-2 – One instrument for full compliance testing offering peace of mind
- ✓ Accurate and Safe – Utilising full 10kV isolation on all measuring systems
- ✓ High current test capability – Allows accurate calibration and measurement of currents up to 8A.
- ✓ High Frequency Leakage – Easy to connect with on screen help for each configuration
- ✓ Power distribution curves - Variable load with full 10kV isolation from 0 to 5115Ω in 5Ω steps – Accurate, fast, and flexible
- ✓ Voltage measurements: RMS, Peak as well as Peak to Peak voltage
- ✓ Plate Security (CQM) test – using electronic potentiometer range up to 475Ω in 1 Ω steps with high and low alarms
- ✓ Stand-alone – Not relying on PC or laptop.
- ✓ Stylish and rugged enclosure – with small footprint ideal for in-situ testing
- ✓ Graphic colour user interface - for fast and easy navigation and connection to DUT
- ✓ Future upgrade ready – download future upgrades from the web into your tester

1.3 Unpacking the Uni-Therm

Carefully unpack all items from the box and ensure the following items are included:

- Rigel Uni-Therm Electrosurgical Analyser
- Mains Power Lead
- Calibration Certificate
- Uni-Therm Quick Start Guide
- Utilities Disc
- USB Cable
- 3 x Jumper Links (p/n 43B759)

1.4 Optional Accessories

- Foot switch adaptor cable set (manufacturer specific, please specify)
- Trolley style hard carry case
- SMB to BNC Oscilloscope connection lead (p/n 367A950)
- Full accessory list available at:

<http://www.rigelmedical.com/downloads/Rigel-Uni-Therm-Accessory-Datasheet-Rev1-2.pdf>

1.5 Warnings and Cautions

Before you power up - Ensure the mains switch positioned at the base panel of the Rigel Uni-Therm is set to the appropriate voltage range i.e. 230VAC or 120 VAC.

Before you power up - Ensure none of the ventilation holes are covered during operation including the ones on the base panel. We strongly recommend positioning the Rigel Uni-Therm on its two hinged feet at the front base.

1.6 User Notes

The following symbols are used throughout this Instruction Manual.



Warning of electrical danger! Indicates instructions must be followed to avoid danger to persons.



Important, follow the documentation! This symbol indicates that the operating instructions must be adhered to in order to avoid danger.



When operating the Rigel Uni-Therm at its maximum capability, in ambient temperature of 40°C and only during certain power tests, the surface temperature of the top cover may exceed temperatures of 50°C but not exceed a surface temperature of 70°C as is permitted under the IEC 61010 design requirements.



Do not connect any active power electrodes to the simulation panel of the Rigel Uni-Therm. Failure to comply with this will void the warranty and might lead to internal damage of circuits.

1.7 Safety Notes



The Rigel Uni-Therm Electrosurgical Analyser is designed for use by adequately trained technical personnel only.



The Rigel Uni-Therm Electrosurgical Analyser is designed for use within the published specifications. Any application outside of these specifications or any unauthorised user modifications may result in hazardous conditions or improper operation and will void the product warranty.



Operation - Refer to the Device Under Test (DUT) manufacturer operating instructions to ensure safe operation whilst analysing the DUT



Safety - Use extreme caution when working with voltages greater than 30 Volts.




Safety - Where safe operation of the Uni-Therm is no longer possible it should be immediately shut down and secured to prevent accidental operation.

It must be assumed that safe operation is no longer possible:


- ! if the instrument or leads show any sign of damage or
- ! the instrument does not function or
- ! after long periods of storage under adverse environmental conditions.

2 Uni-Therm Overview

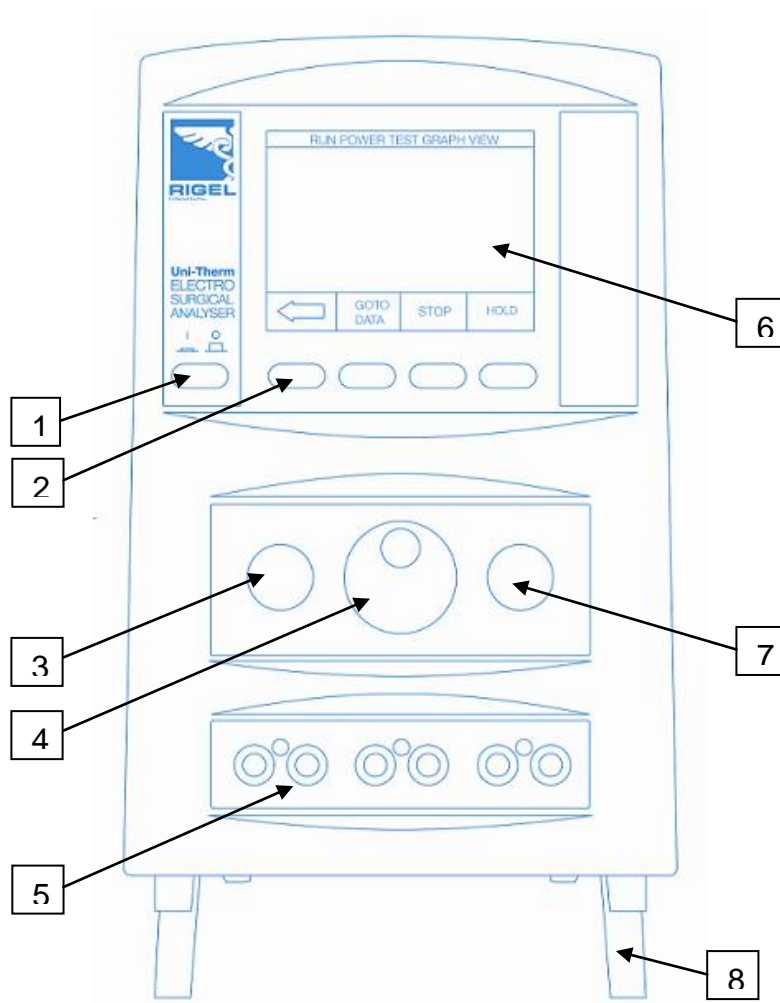


- | | |
|-----------------------------------------|----------------------------|
| 1. ON / OFF button | 5. Simulation panel |
| 2. Function keys (F1-F4) | 6. Colour screen |
| 3. Start / Confirm key (Green) | 7. Stop / Cancel key (Red) |
| 4. Rotary encoder / main navigation key | 8. Hinged feet |

2.1 Simulation panel

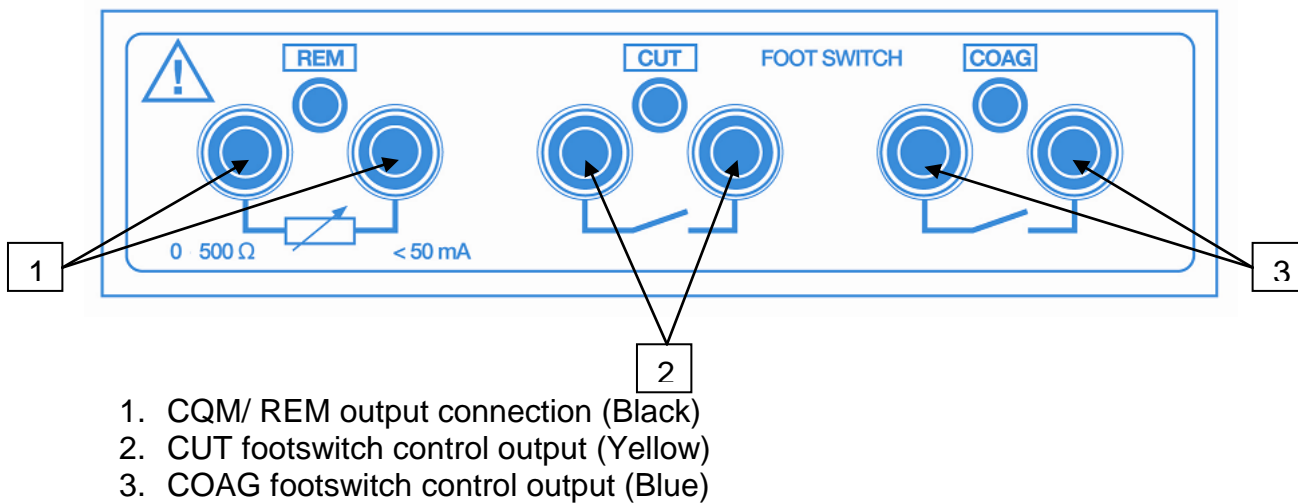

Do not connect any active power electrodes to the simulation panel of the Rigel Uni-Therm. Failure to comply with this will void the warranty and might lead to internal damage of circuits.

2.2 Side panel

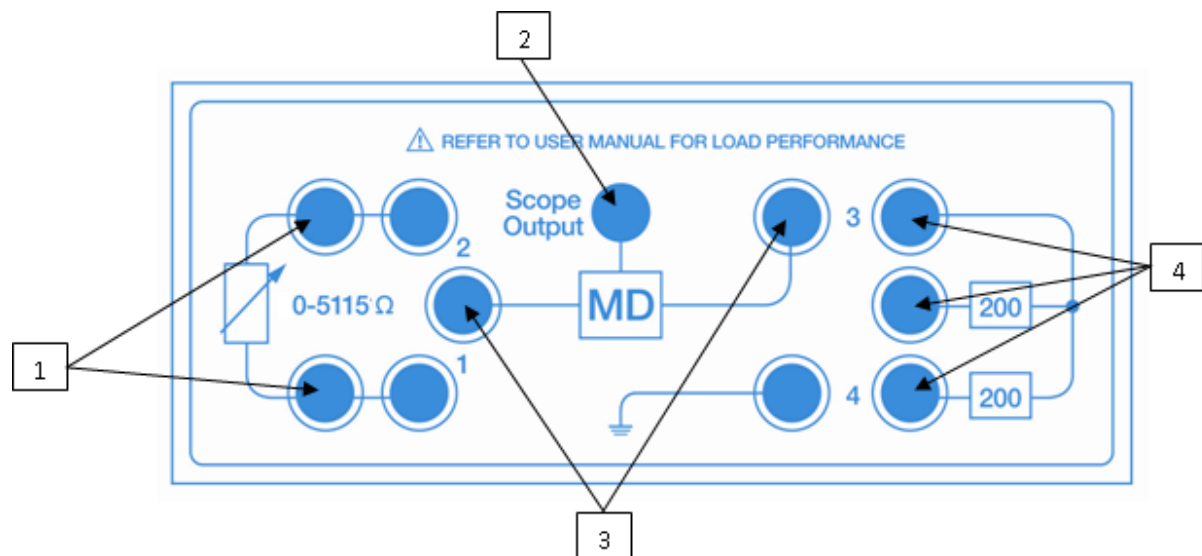

- | | |
|-------------------------------------------------|-----------------------------------------|
| 1. Variable load bank connections (Red & Black) | 3. Measuring Device connections (White) |
| 2. Oscilloscope output* | 4. HF Leakage connections |


*Note; The scope output (SMB connector) provides an 10kV isolated waveform monitoring output however the scope output is not calibrated.

3 Getting started

The Rigel Uni-Therm has been designed to ensure that the user is able to test: quickly, easily and safely. The interfaces to the Rigel Uni-Therm have been segregated into a high-voltage area (side panel) and a safe low voltage area (front panel). This arrangement also ensures that test leads carrying high frequency power are kept as short as possible, and directly facing the equipment under test.

3.1 Connecting your Analyser


- ⚠ Elevate the Rigel Uni-Therm on its two hinged feet at the front base.
- ⚠ Ensure none of the large base and rear ventilation inlets are obstructed during operation,

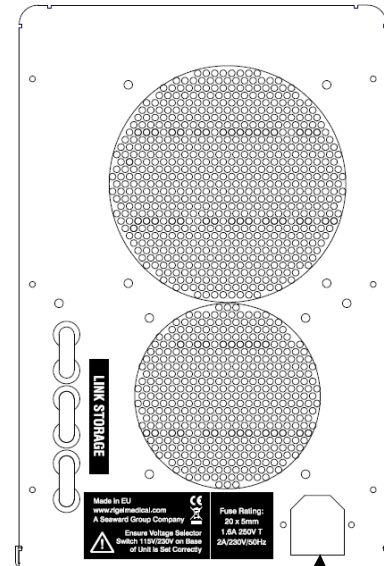

3.2 Rear panel

Connect the mains cable to the IEC connector on the rear panel.

3.3 Simulation connection panel

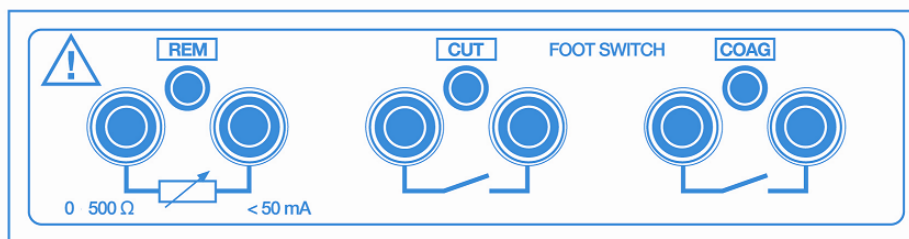


For automatic control during HF leakage and Power tests, connect the ESU footswitch COAG and CUT contacts to the blue and yellow terminals.


- ⚠ It is strongly advised to always use the Rigel Uni-Therm's built-in, automatic control rather than manually switching the output of the electrosurgical diathermy machine under test.

For CQM / plate security test use the black terminals.

3.4 Side panel ESU to ESA connections

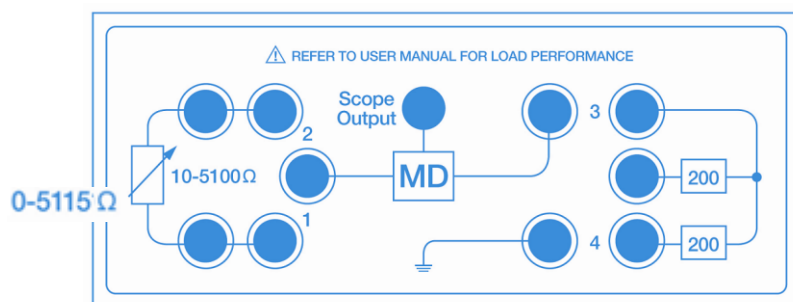


Follow the on-screen instruction diagrams for correct test connection. See [appendices A](#) and [B](#) for embedded connection diagrams. Connect the ESU active and neutral electrodes to the side panel as indicated, also fit jumper links (positions 1, 2, 3, 4) as required to complete circuits.

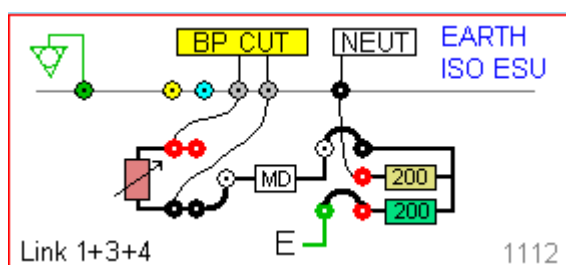

NB: each connection diagram has a unique reference code. eg '1112' for identification.

3.5 Home screen

Upon power-up of the Rigel Uni-Therm, the display will be showing the HOMESCREEN;

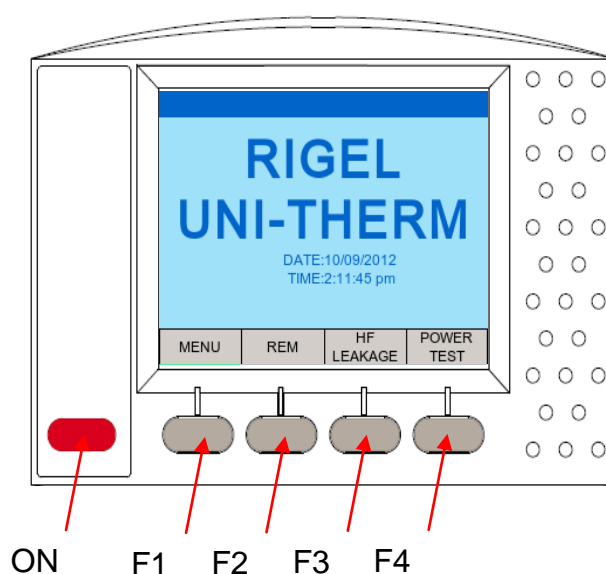

4 Manual Mode

The manual mode provides the user with the features for testing a specific individual function and or test condition; for example to aid fault diagnostic procedures. These tests are available from the home screen.

Available tests are:

- ✓ CQM / REM test
- ✓ HF Leakage
- ✓ Power Test


4.1 Contact Quality Monitoring (CQM) or REM test

This test will control a motor driven potentiometer to trigger the neutral (patient plate) alarm on electrosurgical generators by simulating fault conditions (ie resistance too high or too low, a variation in resistance etc). The variable resistance (0 – 475 Ω) is connected to the two black connectors on the front panel.


Select the CQM / REM test from the home screen shown below.



During the initial CQM / REM test selection, the Rigel Uni-Therm will auto-calibrate the CQM / REM potentiometer;

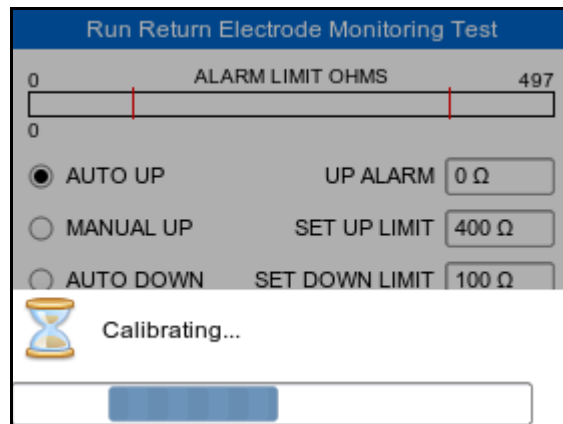

Once the calibration has completed, the CQM / REM test screen will appear;

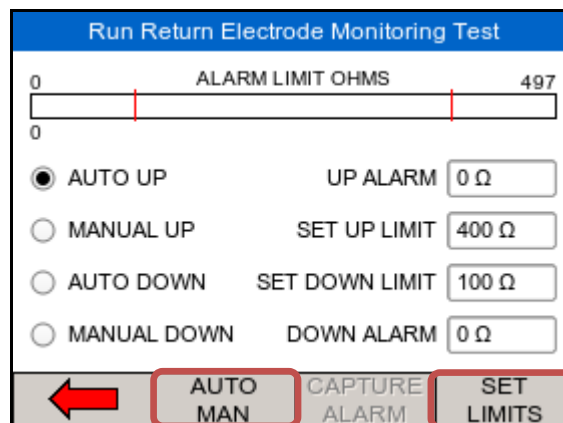

Select automatic (up or down) or manual (up or down) control by using the dedicated AUTO MAN key. This key is also used to set the limits. Once the SET LIMITS field is highlighted in green, use and press the rotary encoder to manipulate the UP and DOWN limits.


Press the Green button to start the test (for automatic mode only). Then capture the alarm value by pressing the dedicated 'Capture Alarm' key on the screen.

In MANUAL UP and DOWN mode, the rotary encoder is used to directly control the potentiometer. The alarm value is then captured by pressing the dedicated 'Capture Alarm' key on the screen.

4.2 HF Leakage

The HF Leakage test measures the HF leakage current in various test configurations (see [appendix A](#)), and compares the result to a user set pass/fail value.

Select the HF LEAKAGE test from the main menu, shown below.

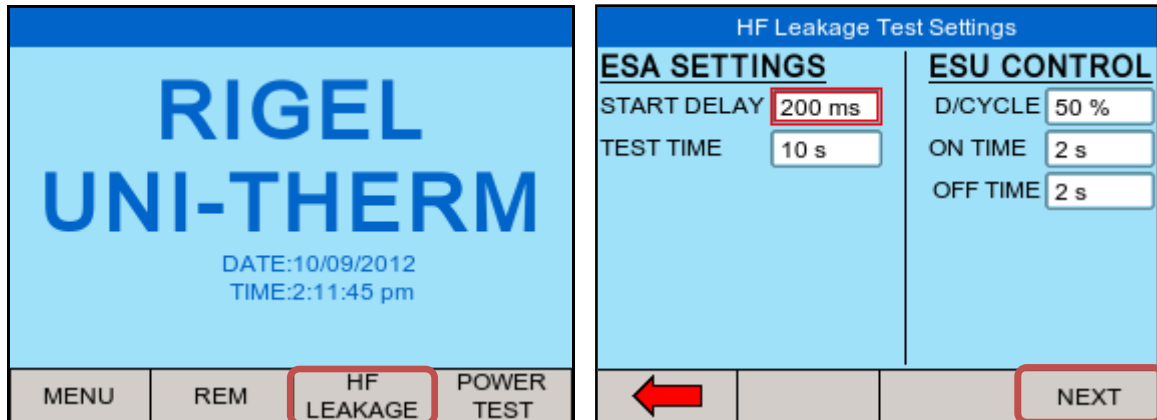

Use the rotary encoder to navigate the screen

Select the required setting and press the rotary encoder to activate the field. Once activated, use the rotary encoder to change the settings. Confirm and deactivate the field by pressing the encoder once again.

START DELAY will allow the user to set a measurement delay for generators operating in a soft start mode.

The TEST TIME will display the total test time of the leakage test and dictate the amount of tests done as a result of the selected ON TIME and OFF TIME.

Note: the D/CYCLE is limited to 50% or less during the leakage test with a maximum ON time of 15 seconds. To increase the ON TIME, the OFF TIME must be increased first in order to remain within the duty cycle limits. This is done to protect the EUT from overheating. If the selected ON / OFF time is above the 50% duty cycle (the Uni-Therm will calculate this automatically), the duty cycle factor appears in red. It's not possible to continue without reducing the duty cycle. A valid duty cycle will appear in black.



HF Leakage Test Settings	
ESA SETTINGS	ESU CONTROL
START DELAY 200 ms	D/CYCLE 88 %
TEST TIME 10 s	ON TIME 15 s
	OFF TIME 2 s
<div> ← NEXT </div>	

HF Leakage Test Settings	
ESA SETTINGS	ESU CONTROL
START DELAY 200 ms	D/CYCLE 50 %
TEST TIME 10 s	ON TIME 2 s
	OFF TIME 2 s
<div> ← NEXT </div>	

Press NEXT to confirm and start selecting the appropriate leakage tests.

Four different measurement scenarios have been described in the particular standard IEC 60601-2-2; See [appendix A](#) for all available leakage settings.


Use the rotary encoder to change between the different leakage configurations. Use either the DIAGRAM mode, shown below.

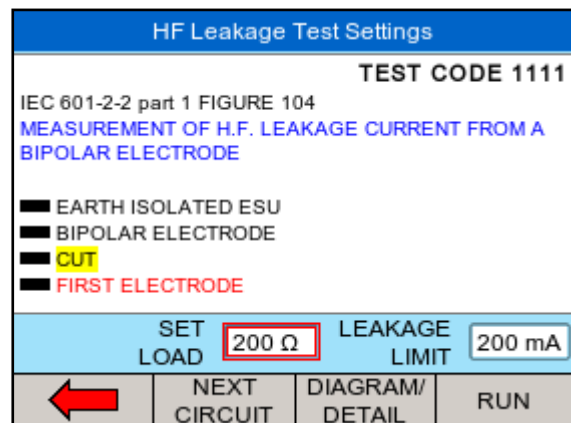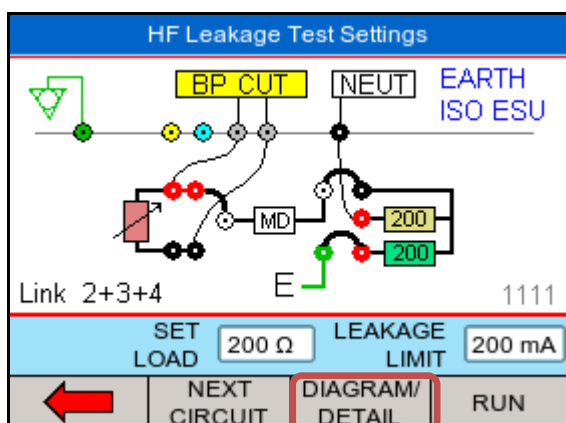

or the IEC 60601-2-2 reference details (SHOW DETAIL). The rotary encoder can be used to scroll the different test setups, or to SET LOAD and LEAKAGE LIMIT values. The selected field is highlighted in red. Press the rotary encoder to activate the field (field turn blue) and use the rotary encoder to change the settings. Press the rotary encoder again to confirm

Return to the DIAGRAM mode by using the SHOW DIAGRAM fast key.

Start the test by pressing the RUN button, and confirm with the green START button on the front of the Uni-Therm;

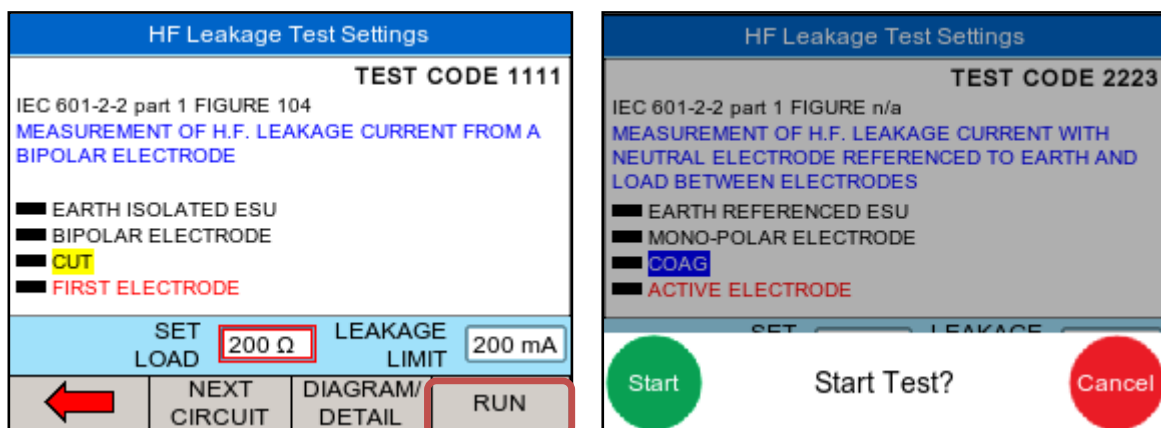

The Rigel Uni-Therm could display the following details after the test;


Load	200	ohms
Leakage	0	mA
Limit	200	mA
<div> <div>Hold</div> <div>SHOW DIAGRAM</div> </div>		

Press the HOLD key to freeze the reading on the screen. The test can be aborted by pressing the red STOP button on the front of the Uni-Therm.

After a test is completed (either PASS or FAIL) press the green START button on the front of the Uni-Therm.

4.3 Power Test

The output power of the Active Electrodes (CUT / COAG and BIPOLAR) is measured, either at a fixed load (Continuous Single Test) or at a range of loads (Power Distribution Graph). The load will vary from a start value to an end value with a number of intervals (resolution). The Rigel Uni-Therm will control the EUT by using the internal footswitch controller.

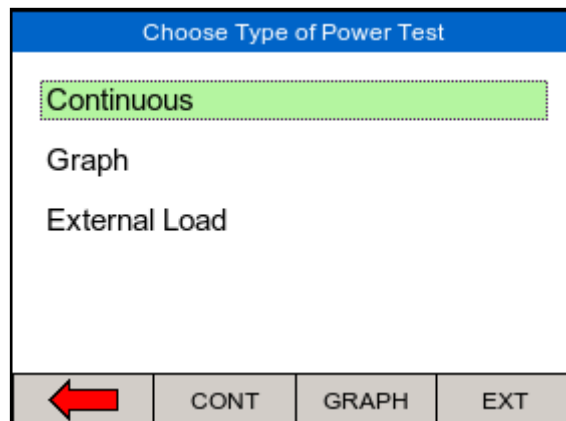


Select Power test from the home screen; then select F2 (CONT) F3 (GRAPH) or F4 (EXT) modes using the fast keys; to select either the Continuous, Graph or External Load test. Use the rotary encoder or the dedicated function keys to navigate.

4.3.1 Continuous mode

The continuous mode allows the user to monitor the power characteristics under a specific load condition.



Ensure that the power settings on the EUT do not exceed those specified in the [Load Power rating Rigel Uni-Therm](#).

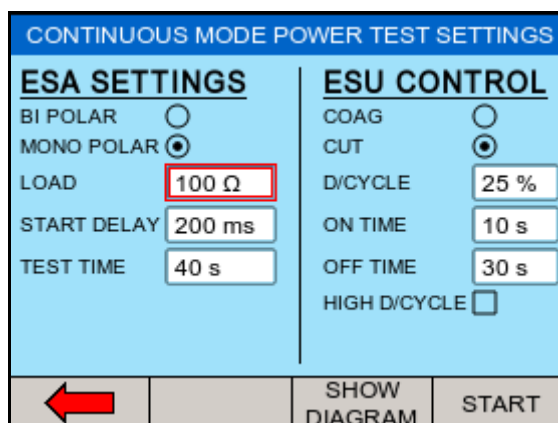

Use the rotary encoder to navigate the screen. The selected field is marked with a red border, presses the rotary encoder to activate the field to allow changes. Confirm and de-activate the field by pressing the encoder once again.

LOAD is required to determine the resistance at which the power measurement is carried out.

START DELAY will allow the user to set a measurement delay for generators operating in a soft start mode.

4.3.2 Graph Mode

The graph mode allows the user to monitor the power characteristics under a range of loads.



Ensure that the power settings on the EUT do not exceed those specified in the [Load Power rating Rigel Uni-Therm](#).

GRAPH MODE POWER TEST SETTINGS	
ESA SETTINGS	ESU CONTROL
BI POLAR <input type="radio"/>	COAG <input type="radio"/>
MONO POLAR <input checked="" type="radio"/>	CUT <input checked="" type="radio"/>
START LOAD <input type="text" value="10 Ω"/>	D/CYCLE <input type="text" value="50 %"/>
START DELAY <input type="text" value="200 ms"/>	ON TIME <input type="text" value="2 s"/>
END LOAD <input type="text" value="2500 Ω"/>	OFF TIME <input type="text" value="2 s"/>
TEST POINTS <input type="text" value="50"/>	
TEST TIME <input type="text" value="200 s"/>	
	SHOW DIAGRAM START

Use the rotary encoder to navigate the screen. The selected field is marked with a red border, presses the rotary encoder to activate the field to allow changes. Confirm and de-activate the field by pressing the encoder once again.

START LOAD is required to determine the starting resistance at which the power curve measurement is carried out.

START DELAY will allow the user to set a measurement delay for generators operating in a soft start mode.

END LOAD, will set the highest resistance at which the power curve measurement is carried out.

TEST POINTS, determines the number of test points (resolution) of the power distribution graph. The higher the number, the more detailed the power distribution graphs.

The TEST TIME will display the total test time of the leakage test and dictate the amount of tests done as a result of the selected ON TIME and OFF TIME and the number of test points.


The BIPOLAR / MONO POLAR and COAG / CUT settings determine the type of connection diagrams when the SHOW DIAGRAM button is pressed. The COAG / CUT settings also determine the activation of the foot paddle control on the front of the Uni-Therm.

Note: the duty cycle is limited to 50% or to protect the EUT from overheating. To increase the ON time, the OFF time must be increased first in order to remain within the duty cycle limits.

Press SHOW DIAGRAM to obtain help on the connection between the Uni-Therm and the EUT.

Press START to confirm the settings and start the test.

During the Graph power test, the Rigel Uni-Therm will display the power distribution graph.

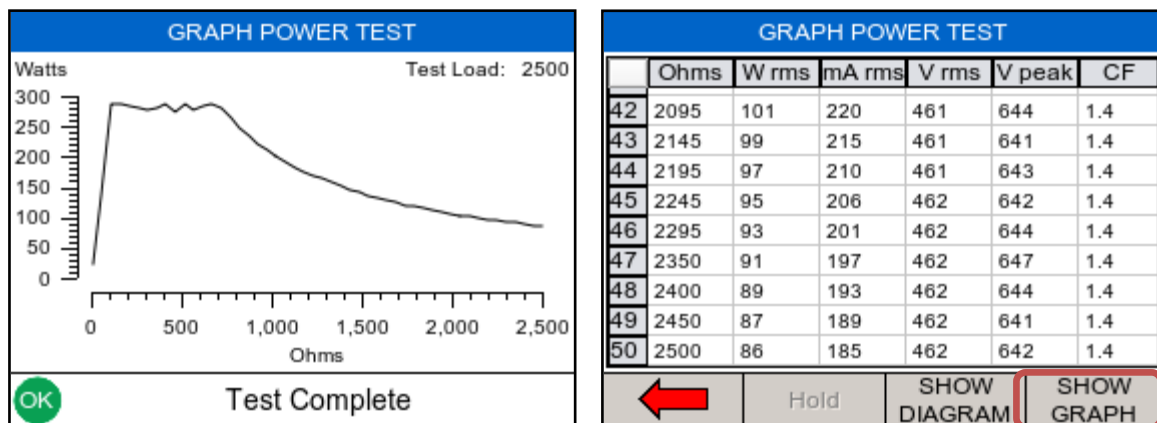

At the end of the test, toggle between GRAPH MODE and DATA by pressing the GOTO DATA fast key

In the automatic mode, a reference graph can be included in the test to automatically detect if the current graph meets the criteria of the reference graph. A full description of how to create a power reference graph is provided in Appendix D.

4.3.3 External Load Mode

The external load mode allows the user to monitor the power characteristics under a specific load condition, utilising external loads or under short circuit condition i.e. for calibration purpose. During the test, the EUT is connected to the external loads and then to the measuring device of the Uni-Therm (MD). The Uni-Therm will calculate the power characteristics at the set external load by measuring the HF current through the MD.



The maximum current measurement during this test is limited to 8A rms.

EXTERNAL LOAD MODE POWER TEST SETTINGS	
<div> <div>ESA SETTINGS</div> <div> BI POLAR <input type="radio"/> MONO POLAR <input checked="" type="radio"/> EXT LOAD <input type="text" value="6.3 Ω"/> START DELAY <input type="text" value="200 ms"/> TEST TIME <input type="text" value="40 s"/> </div> </div>	
<div> <div>ESU CONTROL</div> <div> COAG <input type="radio"/> CUT <input checked="" type="radio"/> D/CYCLE <input type="text" value="25 %"/> ON TIME <input type="text" value="10 s"/> OFF TIME <input type="text" value="30 s"/> </div> </div>	
<input type="button" value="←"/>	<input type="button" value="SHOW DIAGRAM"/> <input type="button" value="START"/>

Use the rotary encoder to navigate the screen. The selected field is marked with a red border, presses the rotary encoder to activate the field to allow changes. Confirm and de-activate the field by pressing the encoder once again.

EXT LOAD is required to determine the correct power calculation and is for reference only. The Uni-Therm's load bank is not part of the test setup.

START DELAY will allow the user to set a measurement delay for generators operating in a soft start mode.

The TEST TIME will display the total test time of the leakage test and dictate the amount of tests done as a result of the selected ON TIME and OFF TIME.

The BIPOLAR / MONO POLAR and COAG / CUT settings determine the type of connection diagrams when the SHOW DIAGRAM button is pressed. The COAG / CUT settings also determine the activation of the foot paddle control on the front of the Uni-Therm.

Note: the duty cycle is limited to 50% or to protect the EUT from overheating. To increase the ON time, the OFF time must be increased first in order to remain within the duty cycle limits.


Press SHOW DIAGRAM to obtain help on the connection between the Uni-Therm and the EUT.

Press START to confirm the settings and start the test.


5 Automatic Mode

The automatic mode allows the user to select a test sequence which will carry out a pre-determined set of tests against user definable limits. Test results are stored at the end of the test for future reference. To view or transfer stored data, please refer to chapter 6)

To enter the automatic mode, select the MENU key (F1) from the home screen and then AUTOMODE;

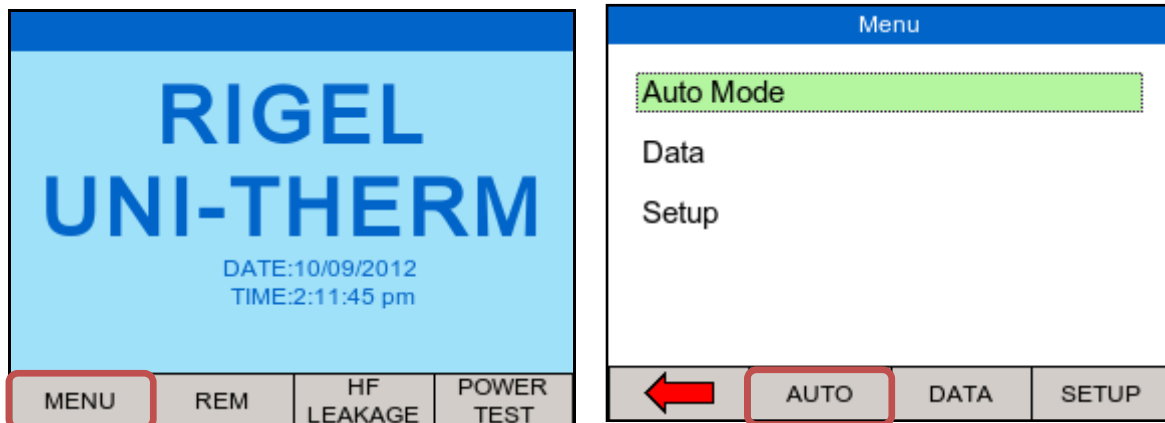


In the following screen, an asset ID number can be entered using the rotary encoder, barcode scanner or a PS2 keyboard.

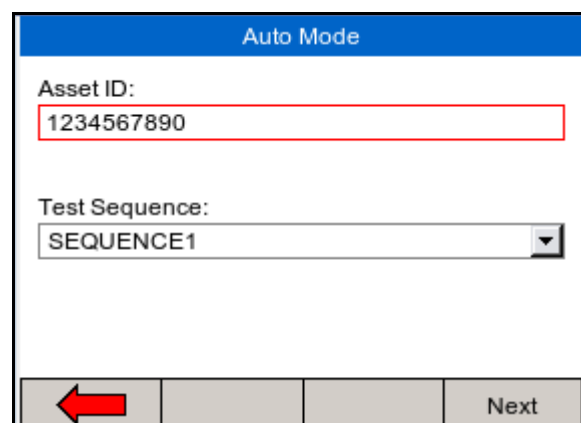

When using the barcode scanner, ensure the barcode scanner is paired with the Rigel Uni-Therm, see Chapter 7. (The Rigel Uni-Therm will only support the Seaward barcode scanner, p/n 339A923). When the barcode is ready to scan, the word "OK" will appear in the asset ID field.


Enter data with the rotary encoder (push to select character) or keyboard (note that the enter key is not required). Press NEXT to choose an available test sequence;

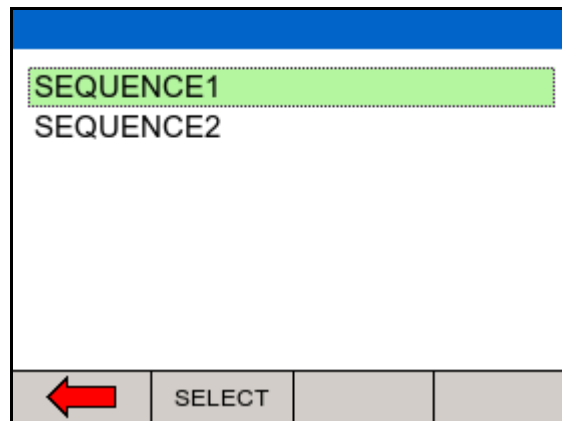


Next, select the Test Sequence box (push to select) and select the required test sequence. (To add new test sequences, see [Chapter 8.1](#)).

From the auto mode screen, press NEXT to start the sequence. In the example below, SEQUENCE2 will be used which was created in Chapter 8.1. The first test in SEQUENCE2 is the REM test.

Use either the AUTO UP or MANUAL UP (F2) to increase the REM resistance. As soon as the EUT goes into alarm, capture the alarm by pressing CAPTURE ALARM (F3). Then continue by selecting the AUTO DOWN or MANUAL DOWN to reduce the resistance and capture the corresponding alarm.

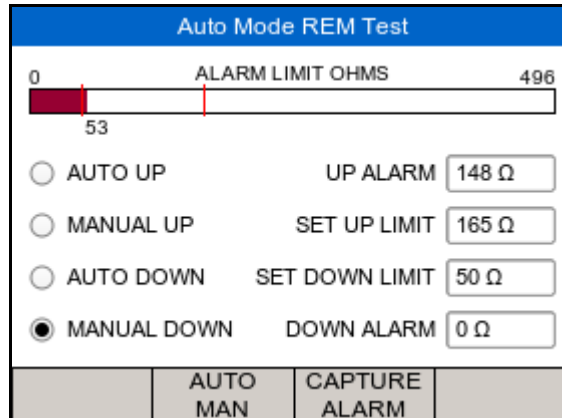


The next step is a custom test to instruct the user to disconnect the neutral electrodes.

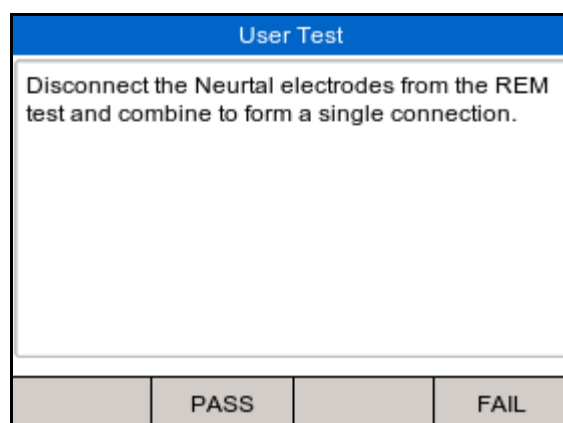


Either press PASS (F2) or the GREEN button to continue,

The next step in SEQUENCE2 is the HF leakage test;

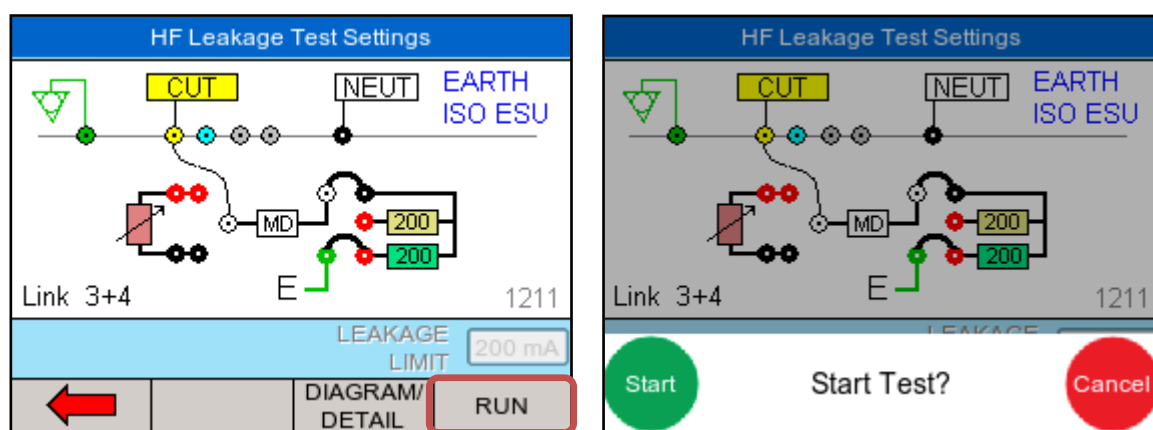

the main screen and press RUN to confirm and start the HF leakage test. The next step is a custom test to instruct the user to set the output power to maximum (300W) in this example.

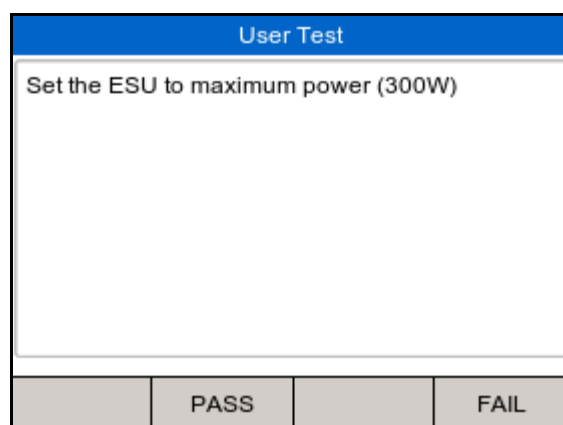

Either press PASS (F2) or the GREEN button to continue

The next step in SEQUENCE2 is the POWER GRAPGH test;

GRAPH MODE POWER TEST SETTINGS

ESA SETTINGS		ESU CONTROL	
BI POLAR	<input type="radio"/>	COAG	<input type="radio"/>
MONO POLAR	<input checked="" type="radio"/>	CUT	<input checked="" type="radio"/>
START LOAD	25 Ω	D/CYCLE	50 %
START DELAY	200 ms	ON TIME	2 s
END LOAD	525 Ω	OFF TIME	2 s
TEST POINTS	20	POWER	300 W
TEST TIME	80 s		
		SHOW DIAGRAM	START

The Rigel Uni-Therm will display the settings. Press SHOW DIAGRAM (F3) to show the connection diagram;

Check connections and confirm by pressing START.


GRAPH MODE POWER TEST SETTINGS

ESA SETTINGS		ESU CONTROL	
BI POLAR	<input type="radio"/>	COAG	<input type="radio"/>
MONO POLAR	<input checked="" type="radio"/>	CUT	<input checked="" type="radio"/>
START LOAD	25 Ω	D/CYCLE	50 %
START DELAY	200 ms	ON TIME	2 s
END LOAD	525 Ω	OFF TIME	2 s
TEST POINTS	20	POWER	300 W
		Start	Cancel

Start Test?

Press the GREEN button to start the test. The Rigel Uni-Therm will now activate the EUT through the foot paddle control on the front panel.

During the test, the screen will update the graph after each measurement is taken. Switch from GRAPGH to DATA (F4) mode to view actual results.

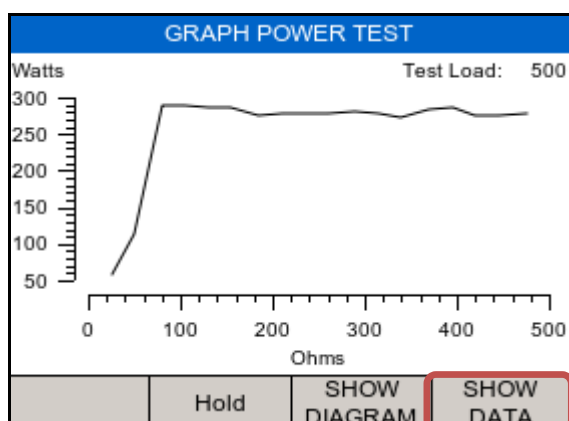

GRAPH POWER TEST

	Ohms	W rms	mA rms	V rms	V peak	CF
1	25	57	1508	38	55	1.5
2	50	113	1498	75	111	1.5
3	80	289	1901	152	224	1.5
4	105	288	1654	174	258	1.5
5	130	286	1481	193	286	1.5
6	155	287	1358	211	314	1.5
7	185	275	1216	226	339	1.5
8	210	277	1145	241	359	1.5


Pass

←

SHOW GRAPH

5.1 Stopping or Failing a Test Sequence


During the test, the sequence can be interrupted or cancelled. Press the red button on the front panel. The following option menu will appear;

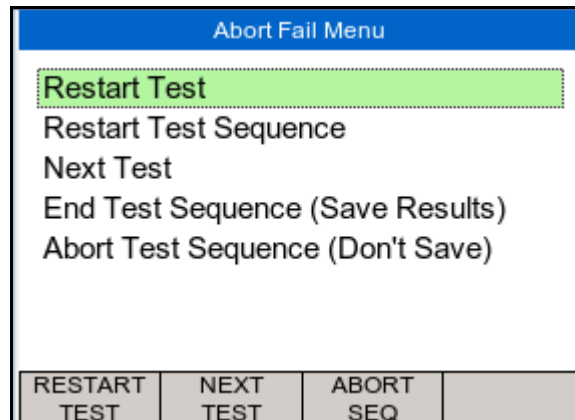

- ✓ Restart Test will continue the test sequence from where it was interrupted.
- ✓ Restart Test Sequence will start the sequence from the beginning.
- ✓ Next Test will skip the current test and move to the next test (note that a failure will be reported for the skipped test).
- ✓ End Test Sequence will stop the test sequence and store the results (fail).
- ✓ Abort Test Sequence will stop the test sequence. No data is stored.

6 Data

Stored data can be viewed and transferred to and from the PC such as test results and power distribution reference curves. To enter the Data menu, select the MENU key (F1) from the home screen and then DATA (F3);

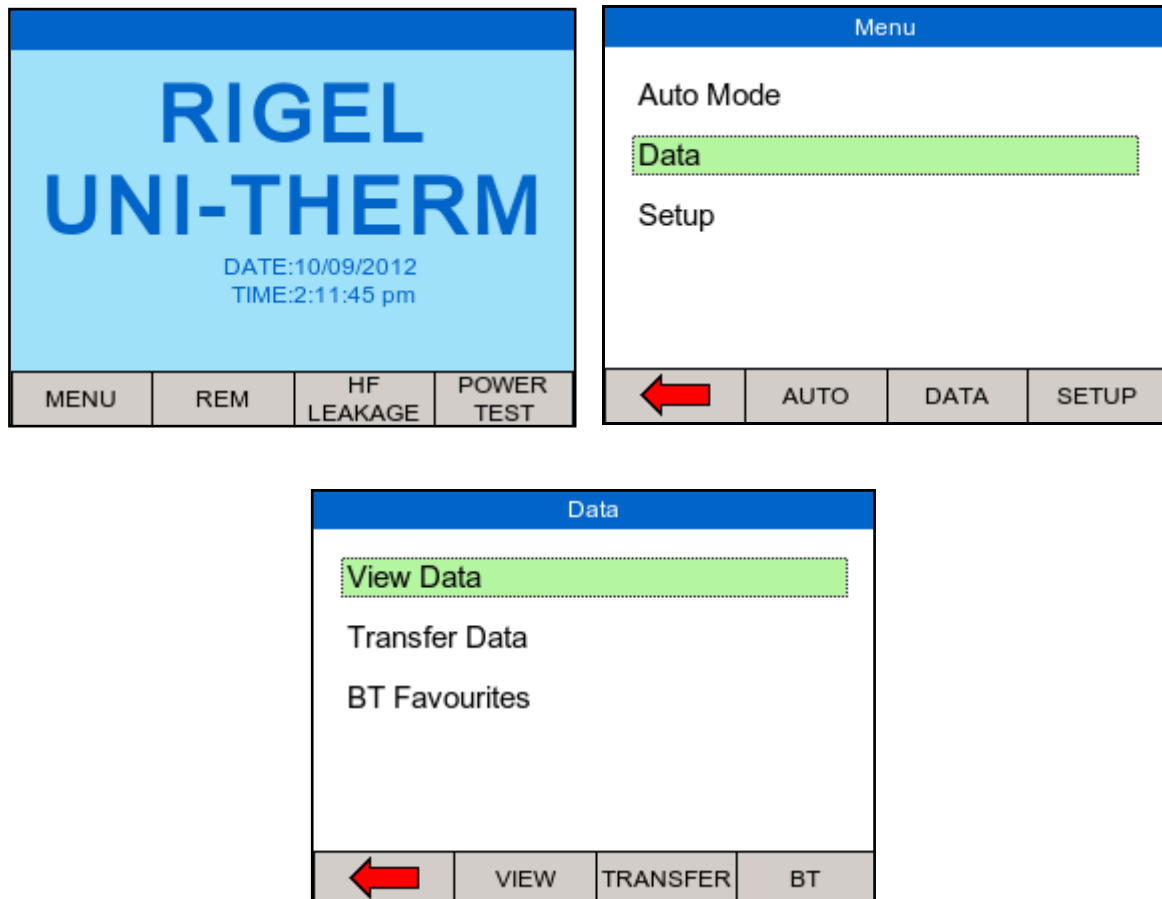

This leads to 3 options;

- ✓ View data (see [Chapter 6.1](#))
- ✓ Transfer data (see [Chapter 6.2](#))
- ✓ BT favourites (see Chapter 7)

6.1 View Data


Stored data can be viewed by selecting the VIEW (F2) from the DATA screen as shown above.

View Data			
	Asset	Date	Status
1	1234567890	11-09-2012	Fail
2	1234567890	11-09-2012	Pass
3	12345abcd	11-09-2012	Pass

Data can be sorted using the SORT (F4) key which will sort on asset number and date either ascending or descending.


From the view data screen, results and test sequences can be viewed by pressing the VIEW button and transferred to a PC by pressing TRANSFER;

To view data, use the rotary encoder to select the asset ID, press to select or press VIEW (F2). This shows the test results for the selected asset ID;

Asset Details			
Asset ID:	1234567890		
Tested On:	11-09-2012 11:03:48		
Test Sequence:	SEQUENCE2		
	Results	Test Seq	Delete

Test results can be viewed by pressing the RESULTS (F2) button, test settings can be viewed by pressing TEST SEQ (F3) button and deleted by pressing the DELETE (F4) button.

When power distribution graphs are part of the test sequence, the results can be displayed in graph mode and data mode, see below. In graph mode, the reference graph is also shown;

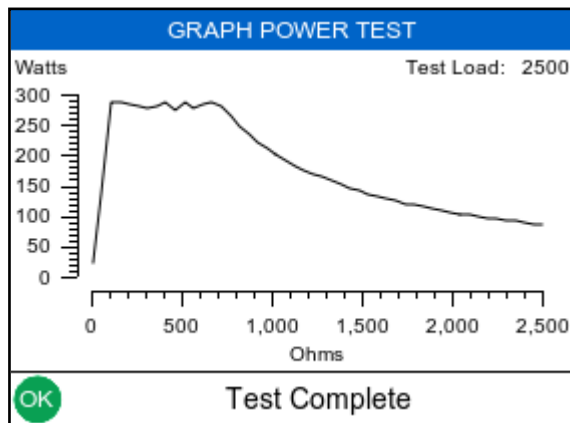


GRAPH POWER TEST						
	Ohms	W rms	mA rms	V rms	V peak	CF
42	2095	101	220	461	644	1.4
43	2145	99	215	461	641	1.4
44	2195	97	210	461	643	1.4
45	2245	95	206	462	642	1.4
46	2295	93	201	462	644	1.4
47	2350	91	197	462	647	1.4
48	2400	89	193	462	644	1.4
49	2450	87	189	462	641	1.4
50	2500	86	185	462	642	1.4

← Hold SHOW DIAGRAM SHOW GRAPH


6.2 Transfer Data

The Rigel Uni-Therm is able to transfer data to and from the PC. In addition, power distribution reference curves can be uploaded to the instrument, to allow quick check of power performance against manufacturer curves.

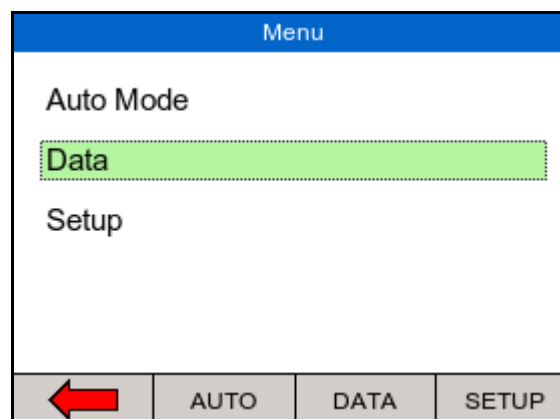


6.3 Download Data

Stored data can be downloaded to the PC in several formats. To capture data as a text file (CSV), select either CSV full or CSV summary. To download the test results into Med-eBase, select the SSS format.

Data Transfer	
Number of Assets:	3
Status:	Idle
Port:	USB PC Connection
Operation:	Export - SSS
	OPERATION PORT START

Change the data format between Export SSS, Export CSV Full, Export CSV Summary, Export Test Sequences, Import Results, Import Ref Graph and Import Test Sequences by pressing the OPERATION (F2) button. Change between USB, USB Memory Stick, using the PORT (F3) key. Start Download by pressing START (F4).


Note that for the EXPORT SSS format must be selected when data is downloaded to [Med-eBase software](#).

Transfer Ready	
<h2>Transfer Ready</h2> <p>Results ready for copying. Attach the unit to a Pc via a USB cable and copy the results file from the removable drive that appears.</p>	
	

The Rigel Uni-Therm will act as a REMOVABLE DISC data storage device and the data file can be copied from the drive that appears in explorer. Note that when using Med-eBase, the export and import of data will commence from the software once the Uni-Therm is in the TRANSFER READY state.

Results for Med-eBase will have the file name Results_01012015_109837.sss with the numbers indicating the date and time of download. All results stored on the unit will be downloaded in one file.

Sequences for Med-eBase will have the file name Sequences_01012015_109837.sss with the numbers indicating the date and time. All Sequences from the unit will be downloaded in one file.

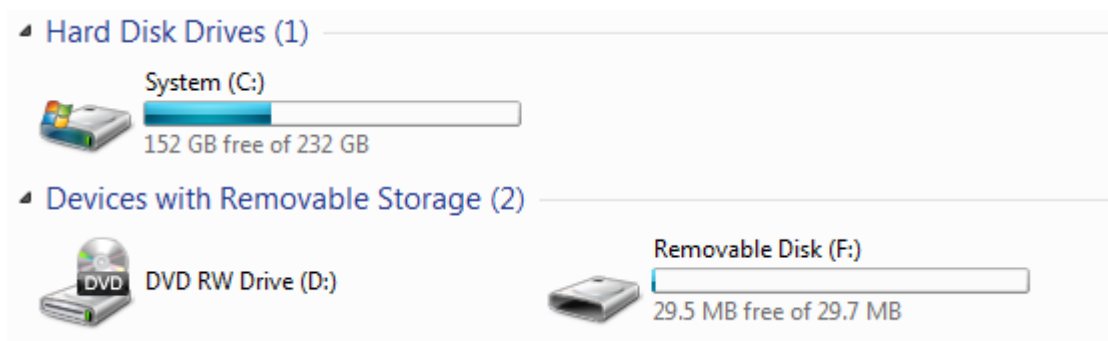

6.4 Upload Data

Test data can be uploaded to the Rigel Uni-Therm by adding downloaded files (see data download above) into the folder that appears in the explorer window. Using Med-eBase software, work and assets can be scheduled (see Med-eBase user manual)


Data Transfer	
Number of Assets:	30
Status:	Idle
Port:	USB PC Connection
Operation:	Export - SSS

←
OPERATION
PORT
START

Change between USB Memory Stick or Cable, using the PORT (F3) key.

Start upload by pressing F4 (Start) (refer to Med-eBase user manual for procedures on Med-eBase)


When the Uni-Therm is put in the upload menu / data transfer, the Uni-Therm will appear as a removable drive. Copy the test results information into the test results folder. The data has now been uploaded to the Uni-Therm.

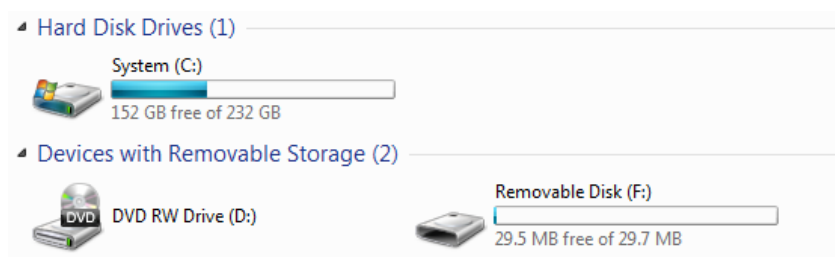

Sequences for Med-eBase will have the file name Sequence_01012015_109837.sss with the numbers indicating the date and time. All Sequences will be uploaded in one file.


6.5 Import Power Reference Curves

To assist with the power distribution graph tests, expected or reference curves can be uploaded to the instrument for quick comparison. An upper and lower limit graph can be uploaded by selecting “Import Ref Graph” on the data transfer screen. Use OPERATION (F2) to change.

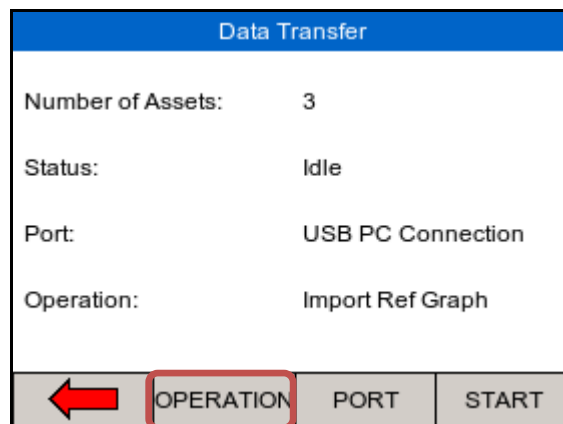

Change between USB Memory Stick or Cable, using the PORT (F3) key.

When using Med-eBase to upload the reference curves, refer to the Med-eBase user manual for procedures. When using Windows Explorer, press START and locate the REMOVABLE DISC.

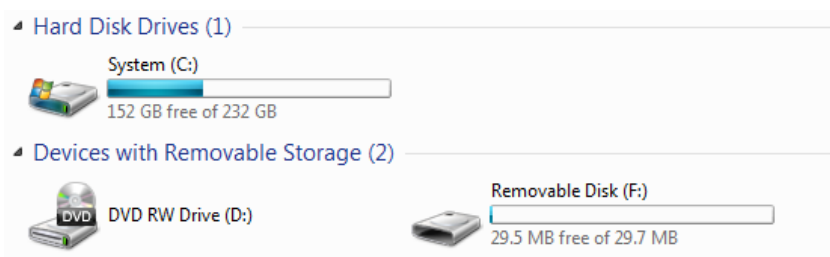


Copy the reference curve .sss files into the corresponding folder. This has now stored the reference curves on the Rigel Uni-Therm.

Please see application note 0031 - Upload Reference Curve to Rigel Uni-Therm for more details on creating curves.

6.6 Transfer Test Sequences

Test sequences can be created on both the Rigel Uni-Therm and in Med-eBase software. Test sequences can then be shared across a number of Rigel Uni-Therm's in order to have identical configuration of test sequences.


Export test sequences from the data transfer screen, select the Export Test Sequences (press OPERATION F2).

Data Transfer	
Number of Assets:	3
Status:	Idle
Port:	USB PC Connection
Operation:	Export Test Sequences
<div> OPERATION PORT START</div>	

Press start to connect the Uni-Therm as an external drive to the PC.

Using Med-eBase, import the test sequences by following the instructions in the Med-eBase instruction manual.

When using windows Explorer, locate the REMOVABLE DISC and navigate to the corresponding folder;

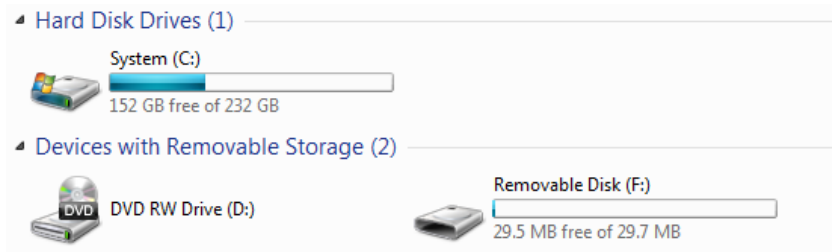

Select the Sequence file and copy to the folder of choice.

The file can then be shared between other PC's and uploaded back into other Uni-Therm units.

To import the test sequence(s), put the sequence in the corresponding folder as shown above. The new test sequences will now appear in the Uni-Therm test sequence library.

Sequences for Med-eBase will have the file name Sequence_01012015_109837.sss with the numbers indicating the date and time.


7 Bluetooth Favourites

In order for the Rigel Uni-Therm to automatically connect to the correct Bluetooth accessory, details of that accessory must be stored into the Bluetooth Favourites list (pairing).


The Bluetooth Favourites list is compatible with the Barcode scanner only :


- ✓ Barcode (Scanner)

To start the pairing process, select DATA from the home screen, followed by BT FAVOURITES.

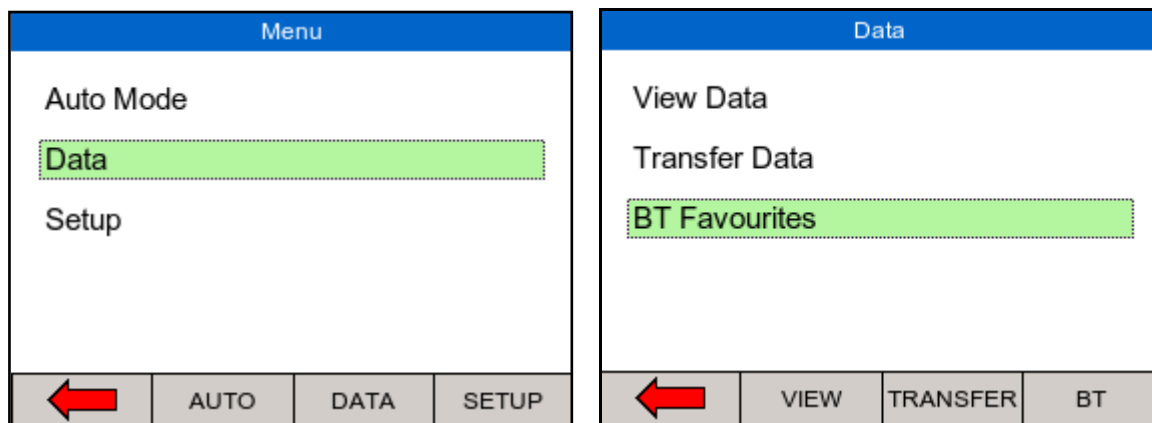


From the BT Favourites screen, press the SEARCH button to list all the Bluetooth devices within reach. (Ensure your device is in “discovery” mode.)

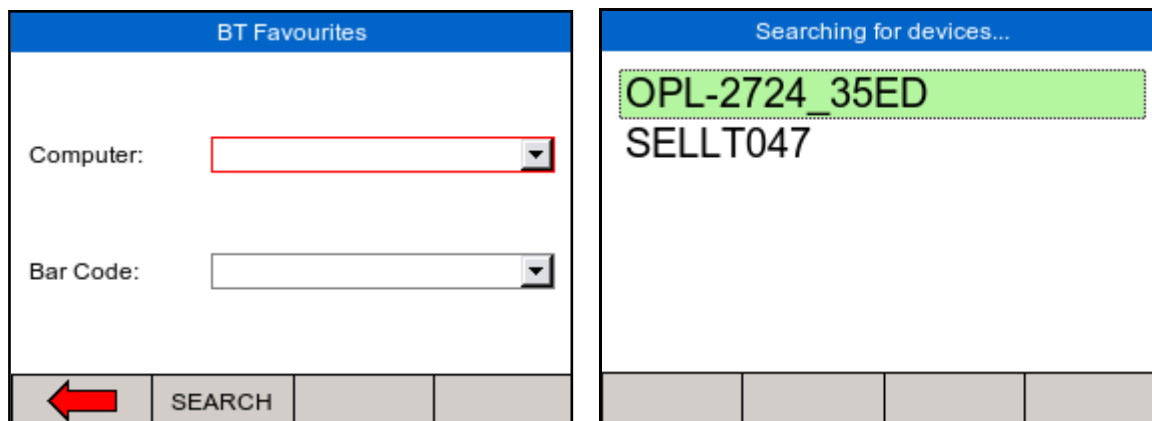


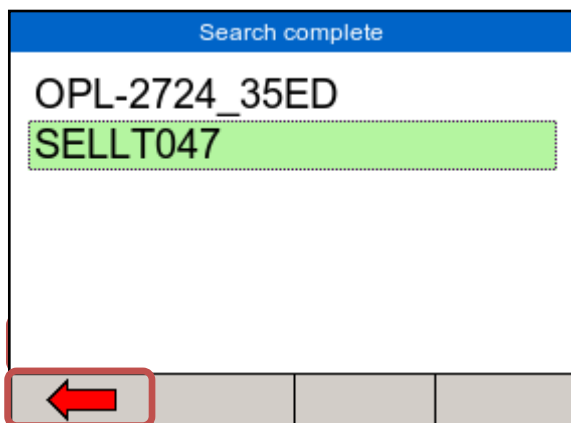

The devices found in range will be listed. Wait until the search has been completed which can take up to 15 seconds. Once the search is completed, press the back arrow key;

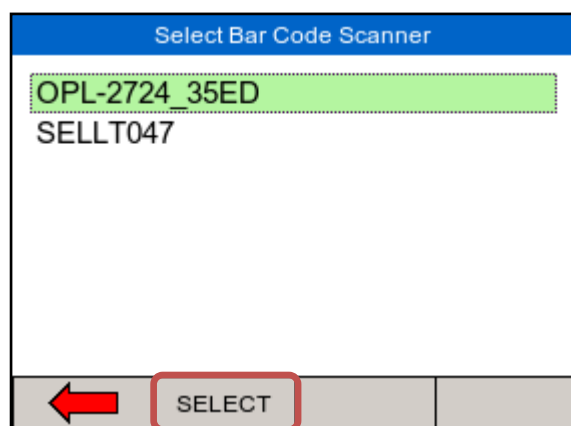

To pair the appropriate device to the corresponding function, select and open the drop down box using the rotary encoder and press SELECT for each correct device;

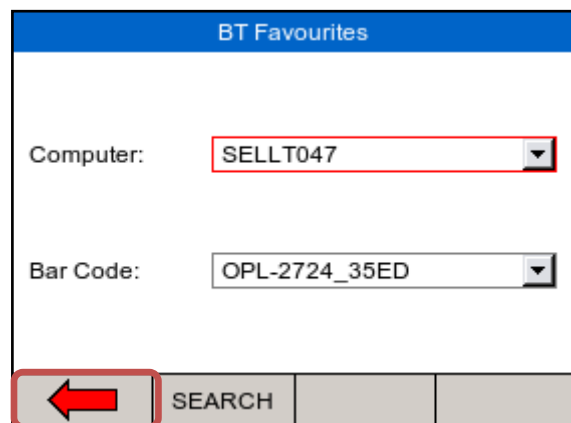


Check that the correct devices are paired for each function and press the back arrow to exit and complete the pairing;

Note If the required device is not shown, check that it is powered on with the Bluetooth function active then repeat the search. Some Bluetooth devices do not report a recognisable name and may cause confusion when setting up Favourites. Turn off or disable unused Bluetooth devices when configuring Favourites.


Note Seaward and Rigel accessories do not require a PIN. When the PC requires an authorisation (some Windows version might ask), enter 0000 (four zero's)

8 Setup

To enter the setup mode, select the MENU key (F1) from the home screen and then SETUP;

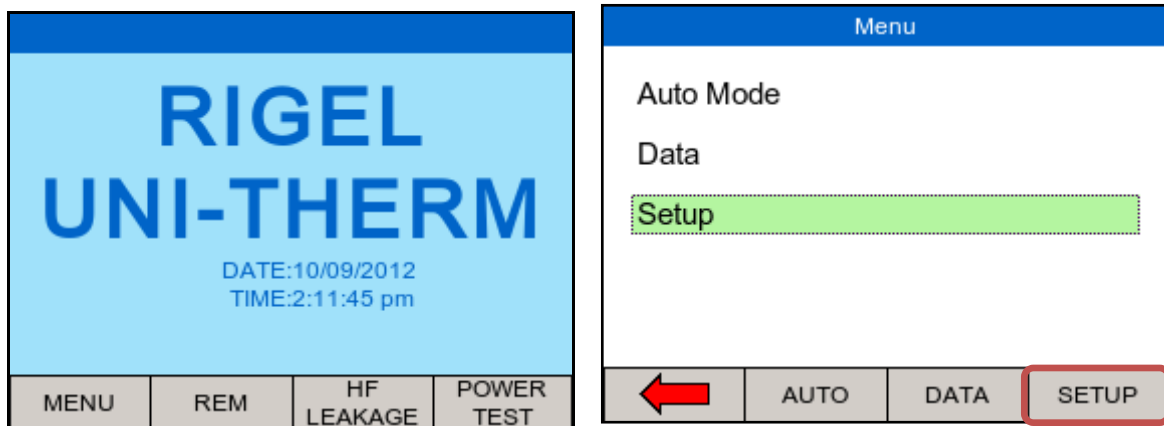

The SETUP menu allows the user to customise the Rigel Uni-Therm;

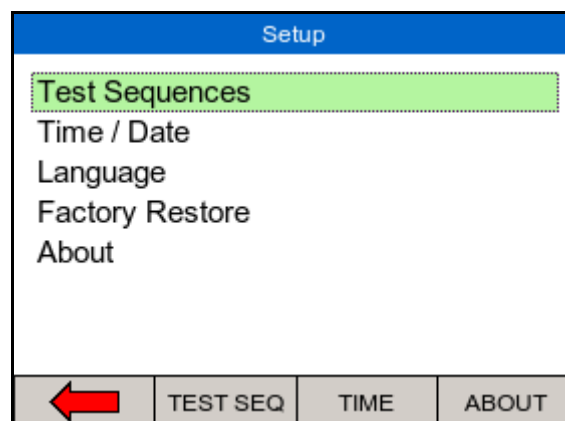

- ✓ View, edit or create test sequences, see [chapter 6.1](#)
- ✓ Configure the local time and date settings, see [chapter 6.2](#)
- ✓ Change the menu language, see, see [chapter 6.3](#)
- ✓ Restore factory settings, see [chapter 6.4](#)
- ✓ View the about screen, see [chapter 6.5](#)


8.1 Test Sequence

The Rigel Uni-Therm can be set-up to perform automatic test sequences. These can be created by the user and can be specific to for example; manufacturers recommendations. The total number of possible test sequences is 100.


From SETUP menu, select the test sequence option;

8.1.1 Creating a new test sequence


Select test sequences from the SETUP menu;

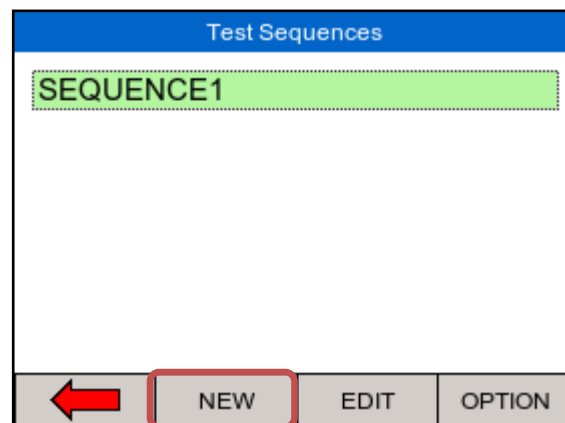


Select NEW (F2) to open a new test sequence and enter a name, use the rotary encoder or USB keyboard to enter data; Select KEYBOARD to change the format from QWERTY to ABCD style;

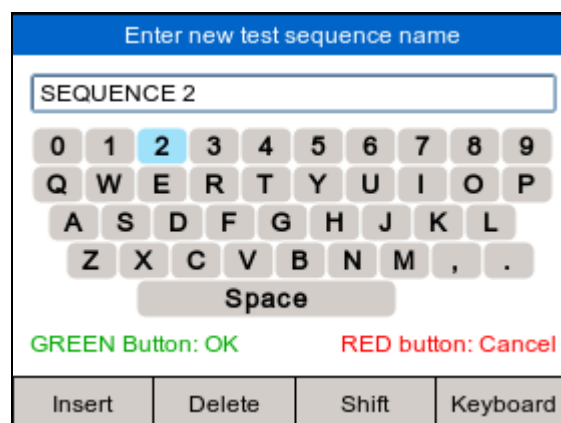

Press the GREEN button to confirm or RED button to cancel.

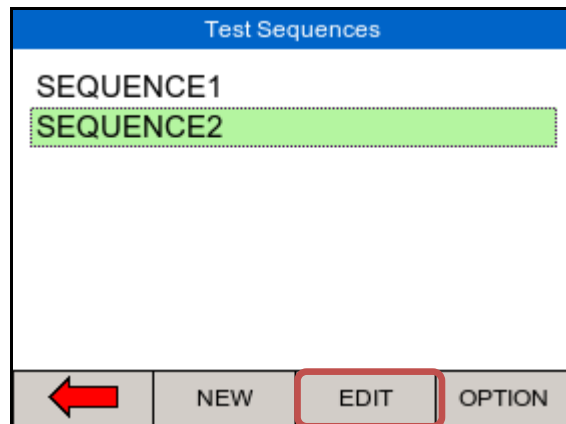


Press the EDIT (F3) button to open the test sequence for editing;

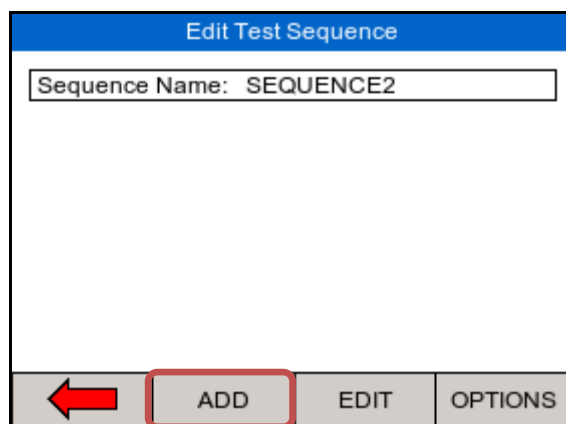

Note; when no individual tests are inserted, the EDIT and OPTIONS buttons are not active

Start adding individual tests to the test sequence by pressing the ADD (F2) button;

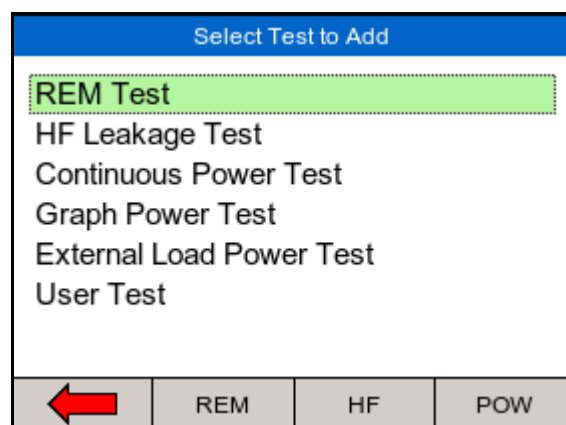

Highlighted the required test using the rotary encoder and press to select;

Repeat the above steps until the required test sequence is completed. Note that additional tests can be inserted in the test sequence by highlighting the position in the sequence and press the ADD (F2) button. The test will be inserted AFTER the highlighted position.


The individual tests can now be edited / configured to the specific requirements. Once an individual test has been configured, they can be copied and pasted repeatedly by selecting the OPTIONS button.

Edit individual tests by selecting the required test and press EDIT (F3);


Once the selected criteria have been set, confirm by pressing the UPDATE (F4) button.

User tests can be inserted and used for providing instructions to the test engineer. Select the user test and press EDIT (F3);


In the user test screen, select the field you want to edit which is highlighted with a red border. Press the rotary encoder to open the field for editing;

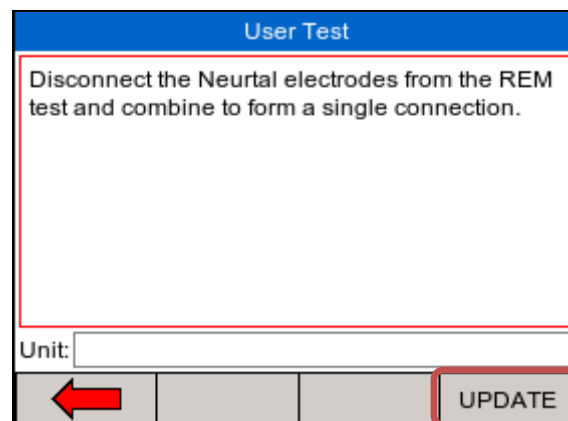


In case the user test requires data entry such as a result, the user test can also include an engineer unit such as Ohms, Watts, Celsius etc. Confirm the entry by pressing the UPDATE button. Once the test sequence is completed, press the back arrow key and confirm the changes:

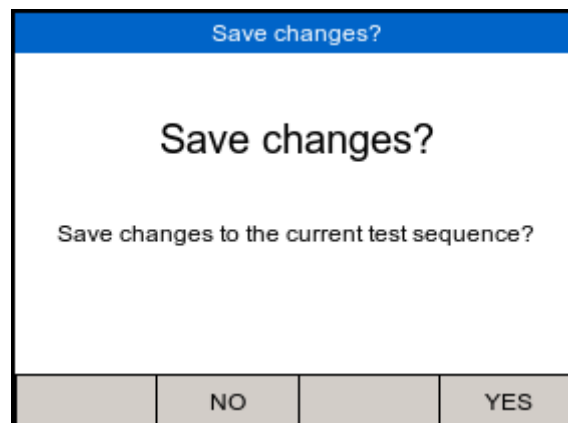

The new test sequence has now been added to the test library;

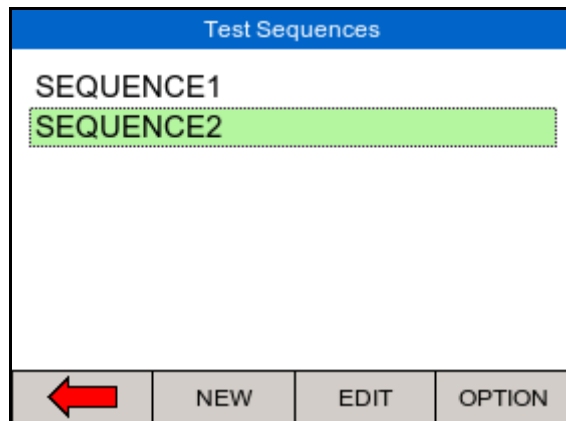


Edit Sequence Name, Copy or Delete the test sequence from the Test Sequences menu, select OPTION;

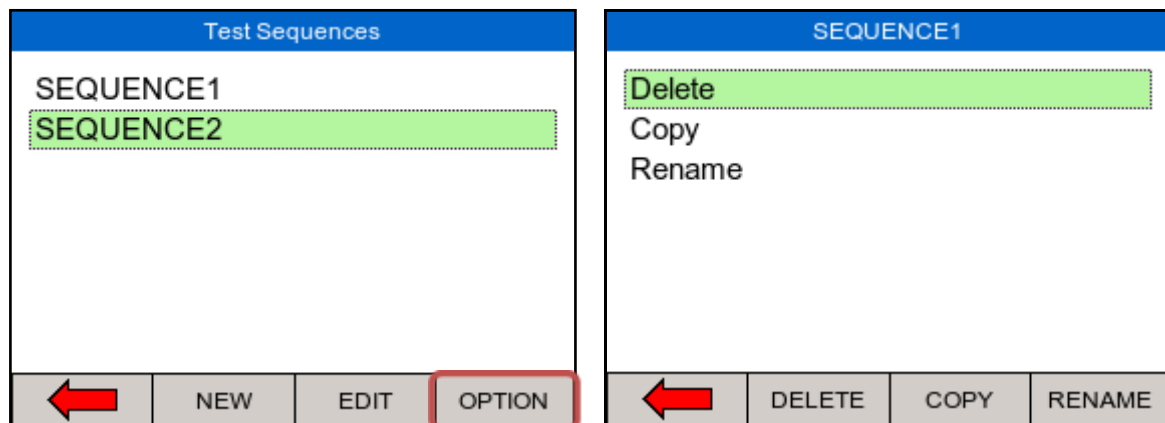

To delete a test sequence, press DELETE
 To copy a test sequence, press COPY
 To rename a test sequence, RENAME

8.2 Time Date

To modify the time or date including time format (12 / 24h clock), select the Time / Date (F3) option in the setup menu;

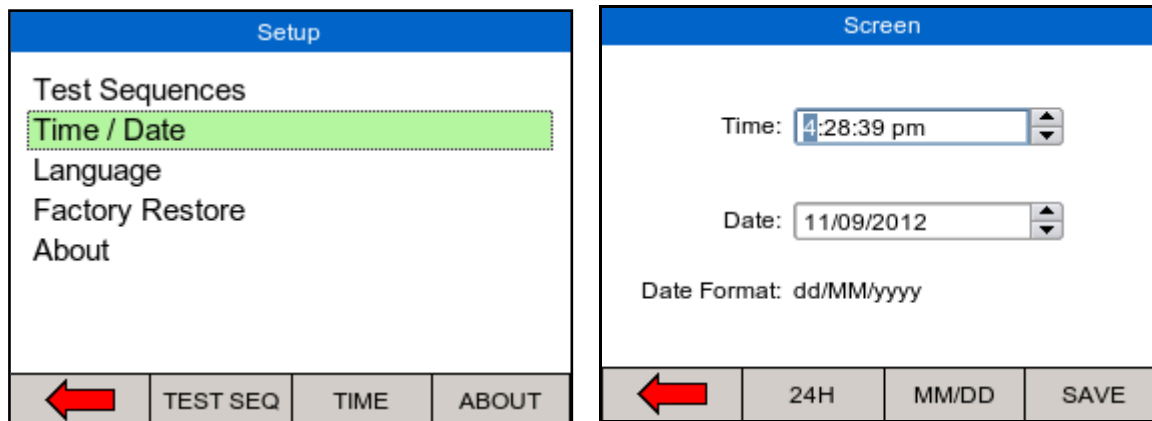


Press 24H (F2) to change between 12H (AM/PM) and 24H clock format.
Press MM/DD (F3) to change between MM/DD and DD/MM format.

Use the rotary encoder to navigate, push to activate field and change values using the rotary encoder. Press SAVE to confirm.

8.3 Language

To change the language, select the language option in the setup menu, see below;

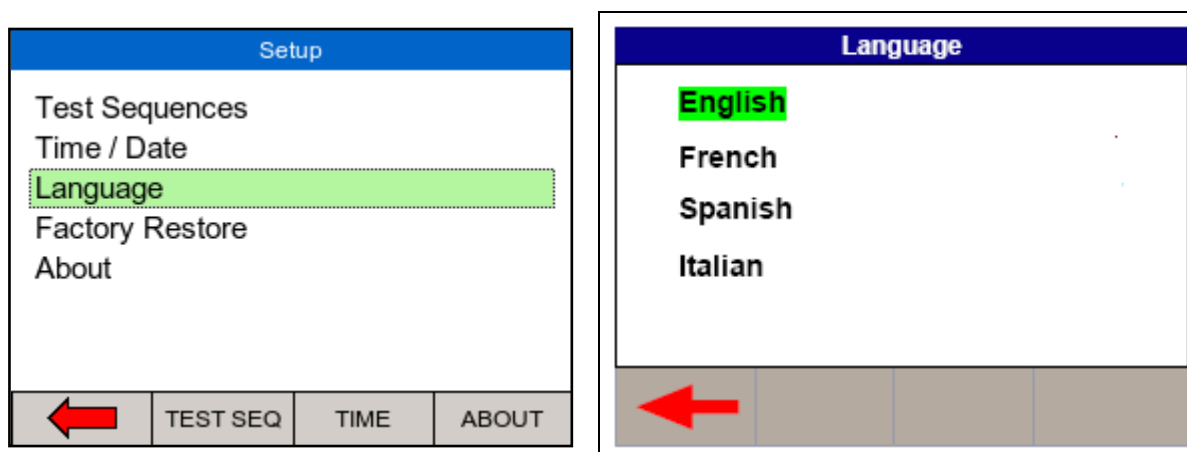


Use the rotary encoder to navigate, push to select the language. Press the back button (F1) to confirm or return to previous menu. The list of languages might change from that in this manual as they are continuously updated.


8.4 Factory Restore

Restore instrument to factory default settings can delete all user created test sequences, reference graphs and can also be used to clear the memory. The user is given an option to select which part of the memory is being restored to the factory default.

To restore factory default, select the factory restore option in the setup menu, see below;

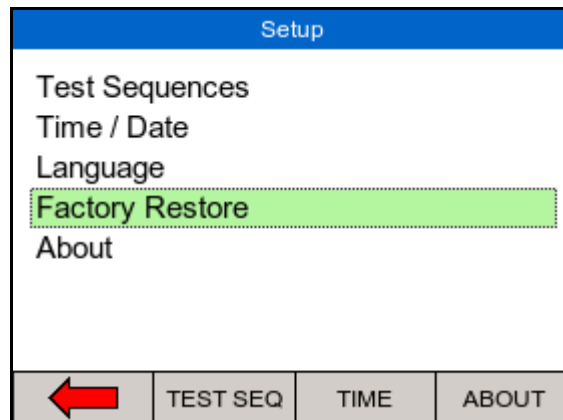

An overview of the memory usage is provided;

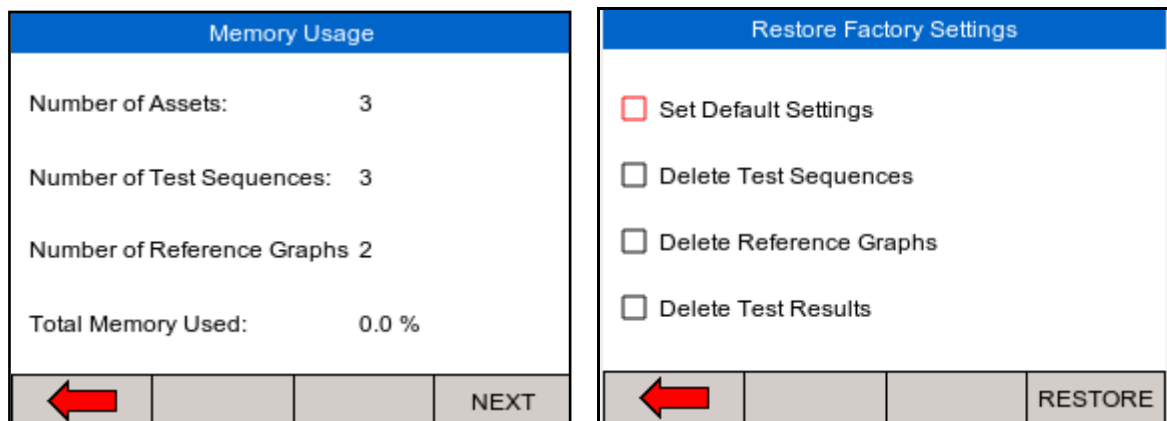

Press NEXT to select which part of the memory to restore to factory default;


Use the rotary encoder to select which part of the memory is being affected.

Individual assets can be deleted from the view data menu, see [chapter 4.1](#)

8.5 About

The about screen shows the firmware versions and serial number of your device.

Ensure you have this information available when contacting Rigel Medical for Technical Support or Service. See [chapter 7.4](#) for more information on Service and Calibration.

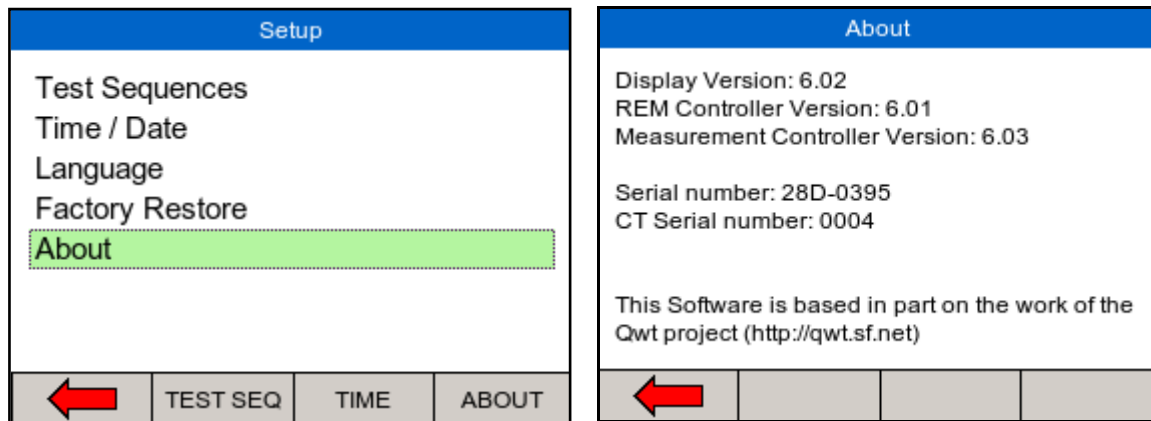

9 Maintaining the Rigel Uni-Therm

9.1 Cleaning the Analyser

The Rigel Uni-Therm case can be cleaned with a damp cloth with, if necessary, a small amount of mild detergent. Prevent excessive moisture around the socket panel.

Do not allow liquid inside the Rigel Uni-Therm or near the sockets. Do not use: abrasives, solvents, or alcohol.

If any liquid is spilt into the Rigel Uni-Therm case, the analyser should be returned for repair, stating the cause of the defect.

9.2 User Maintenance

The Rigel Uni-Therm is a rugged quality instrument. However, care should always be taken when using, transporting and storing this type of equipment. Failure to treat the product with care will reduce both the life of the instrument and its reliability.

If the Rigel Uni-Therm is subject to condensation, allow the Analyser to completely dry before use.

- ✓ Always check the Rigel Uni-Therm and all test leads for signs of damage and wear before use.
- ✓ Do not open the Rigel Uni-Therm under any circumstances.
- ✓ Keep the instrument clean and dry.
- ✓ Avoid testing in conditions of high electrostatic or electromagnetic fields.
- ✓ Maintenance should only be performed by authorised personnel.
- ✓ Apart from the mains cable and fuses, there are no user replaceable parts in the Rigel Uni-Therm.
- ✓ The unit should be regularly calibrated.

9.3 Firmware Upgrade

The Rigel Uni-Therm is designed to allow service agents and users to easily upgrade the firmware by using the internet to download: the latest firmware, a loading application, and instructions.

The firmware is installed using a PC via the USB port or via a USB stick.

To obtain the latest firmware, the Rigel Uni-Therm will need to be registered; this will also provide automatic upgrade alerts to the user.

9.4 Return Instructions.

For repair or calibration return the instrument to:-

Rigel Medical Service Dept.,
p.a. Calibration House
Bracken Hill
South West Industrial Estate
Peterlee, Co. Durham
SR8 2SW, England

Tel : +44 (0)191 587 8739
Fax: +44 (0)191 586 0227

sales@rigelmedical.com

service@calibrationhouse.com

www.calibrationhouse.com

www.rigelmedical.com

Prior to returning your unit for service, please contact our service department to obtain a Returns Number.

By obtaining a Returns Number, your service request can be booked in advance thus reducing the down time of your equipment.

When asking for a Returns Number, please quote:

- ✓ Instruments name and model
- ✓ Serial number
- ✓ Firmware version

10 Specifications

10.1 Technical Specification

HF Power Watt (RMS)	True RMS Watts (0 -500W) Refer to load/power graph
Accuracy	±(1W +5% of reading)
HF Current (RMS)	0 – 6000mA with load bank 0 – 8000mA external load test
Accuracy	±(2% of reading +10mA)
Voltage (RMS)	0 - 700V
Accuracy	±(10% of reading +5V)
Voltage (peak)	0 – 10KV (Peak) – Closed load only
Accuracy	±(10% of reading + 15V).
Crest Factor	1.4 – 20 (± V _{peak} / V RMS) The higher of the 2 peak voltage measurements is used.
RMS Bandwidth (instrument only)	30 Hz to 10MHz MHz (-3 dB)
RMS Bandwidth (with load bank)	30 Hz to 2.5 MHz (-3 dB)
Interference Frequency Filter	100 Hz high pass filter
Isolation (earth to measurement device)	10kV
Measurement delay adjustment	Foot switch delay selectable between 200 – 5000ms (10ms resolution)
Variable Load	0 - 5115Ω, steps @ 5Ω
Load Resistor Type	Ceramic Resistors (Non inductive)
Accuracy	±(1%, + 0.5, -0.5 Ω of set load)
Power rating	See load/power graph
Duty cycle	Up to 100% at 60 seconds ON time, see load/power graph
Fixed Loads	2 x 200Ω
Accuracy	±1%, + 0.5,-0.0 Ω
Power rating	20 Watt (100% duty cycle)
Plate Security (REM) resistor	0 - 475Ω, 1Ω step
	Motor driven potentiometer
Accuracy	±5% ± 2 Ω
Alarm register	High and low, manual confirmation
Ranging	Manual or automatic

Oscilloscope output	0.5V/A, 100mA RF current minimum input, un-calibrated , indication only
---------------------	-------------------------------------------------------------------------

Connections



Variable load 0 – 5115Ω	2 x 4mm Red = Active, Black = Plate
Fixed Load x 200Ω	1 x 4 mm black (common), 2 x 4 mm red
Measuring device (MD)	2 x 4mm White
Oscilloscope output	SMB coaxial connector
REM test 0-475 ohm	2 x 4 mm – black
Remote foot switch control (CUT)	2 x 4 mm - yellow, Single relay contact
Remote foot switch control (COAG)	2 x 4 mm - blue, Single relay contact
USB B port	PC interface
USB A port	Key board
Data Storage and Recall	
Memory	4Mb
Output	CSV format, sss, test sequences, results, reference power graphs.



10.2 General Specification

Dimensions	370 X 300 X 204mm
Weight	11 Kg
Operating Temperature	10 °C to 40 °C
Storage Temperature	0°C to 50 °C
Mains power	115/230 ±10% VAC; 48 to 66 Hz, 35 VA
Fuses	2 x 1.6 A (T) ceramic

10.3 Load Power rating Rigel Uni-Therm

External Load mode Current Limit = 8 A rms
No power rating (user supplied Load)

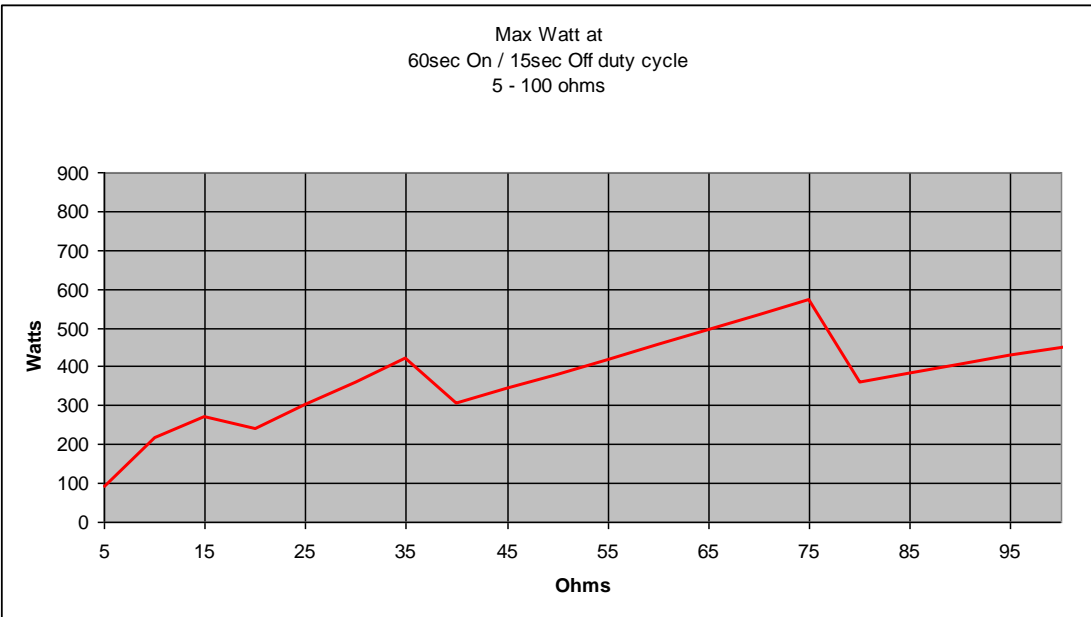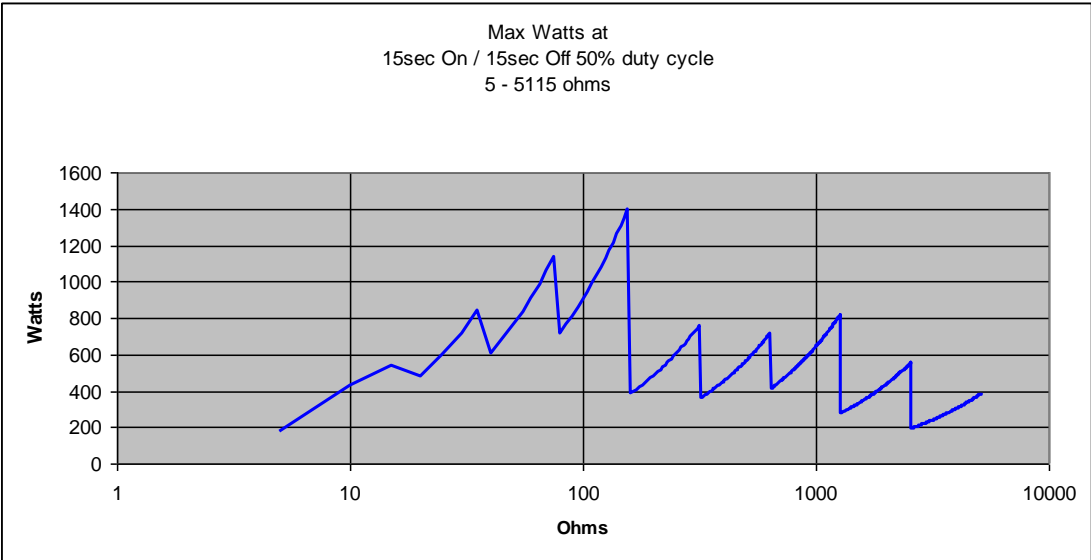

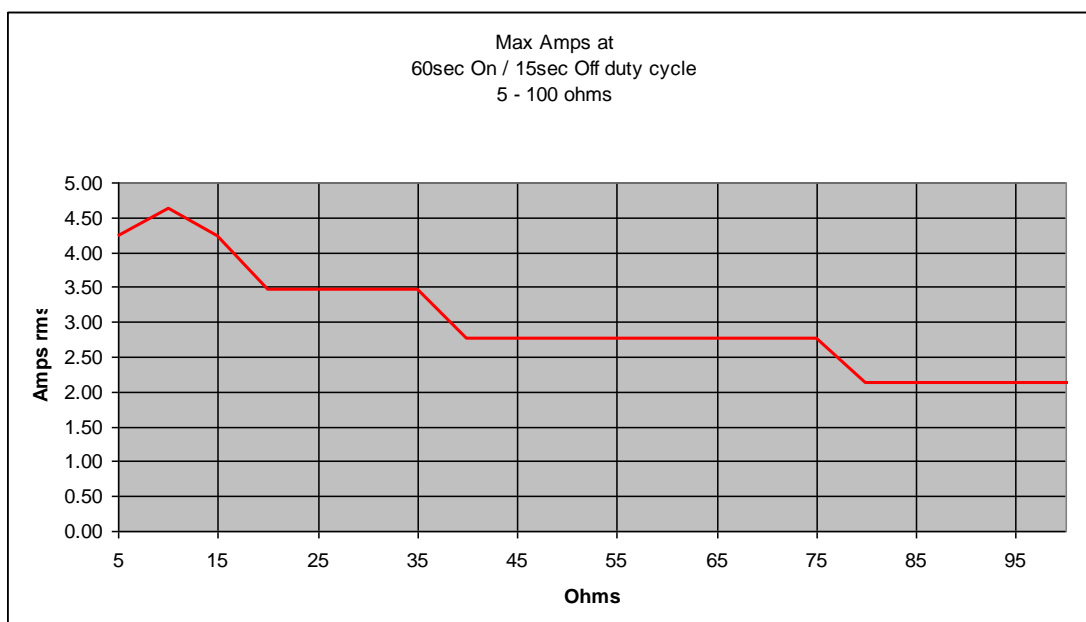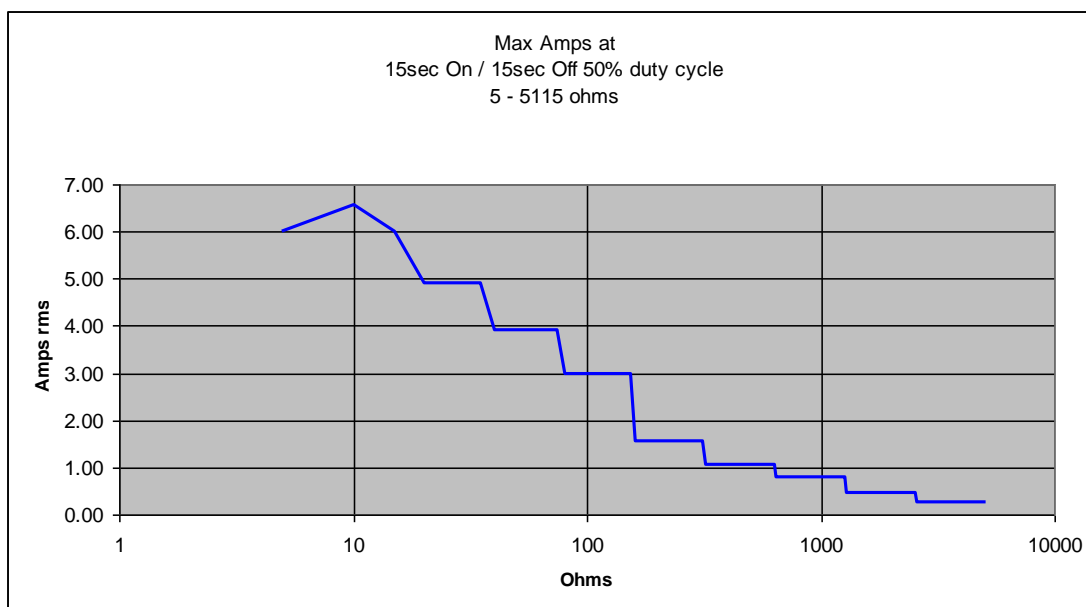

11 Support

11.1 Contact Us

Rigel Medical Contact details

Sales and Delivery enquiries

Tel: +44 (0) 191 587 8730

Fax: +44 (0) 191 586 0227

Email: sales@rigelmedical.com

Technical enquiries

Tel: +44 (0) 191 587 8701

Email: support@rigelmedical.com

CalibrationHouse Contact details

Service, Calibration and Repair

Tel: +44 (0) 191 587 8739

Fax: +44 (0) 191 518 4666

Email: info@calibrationhouse.com

Rigel Medical Address details

Rigel Medical

15 - 18 Bracken Hill

South West Industrial Estate

Peterlee, County Durham

SR8 2SW, United Kingdom

CalibrationHouse Address details

CalibrationHouse

11 Bracken Hill

South West Industrial Estate


Peterlee, County Durham

SR8 2SW, United Kingdom

12 Appendix A IEC 60601-2-2 Leakage Tests


TEST CODE 1111

IEC 601-2-2 part 1, FIGURE 104 MEASUREMENT OF H.F. LEAKAGE CURRENT FROM A BIPOLAR ELECTRODE EARTH ISOLATED ESU BIPOLAR ELECTRODE **CUT** MODE FIRST ELECTRODE

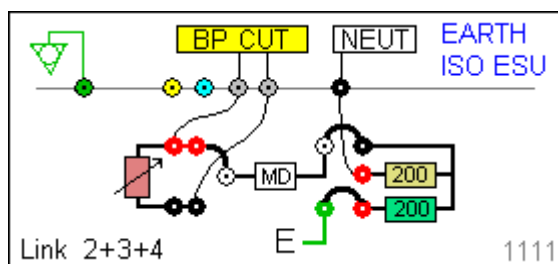


TEST CODE 1112

IEC 601-2-2 part 1, FIGURE 104 MEASUREMENT OF H.F. LEAKAGE CURRENT FROM A BIPOLAR ELECTRODE EARTH ISOLATED ESU BIPOLAR ELECTRODE **CUT** MODE SECOND ELECTRODE

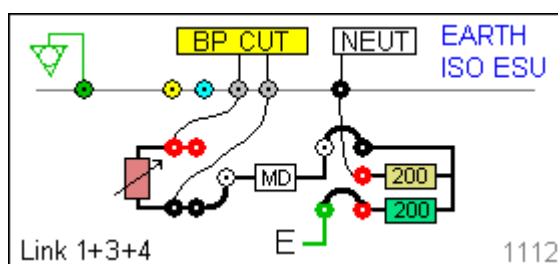


TEST CODE 1121

IEC 601-2-2 part 1, FIGURE 104 MEASUREMENT OF H.F. LEAKAGE CURRENT FROM A BIPOLAR ELECTRODE EARTH ISOLATED ESU BIPOLAR ELECTRODE **COAG** MODE FIRST ELECTRODE

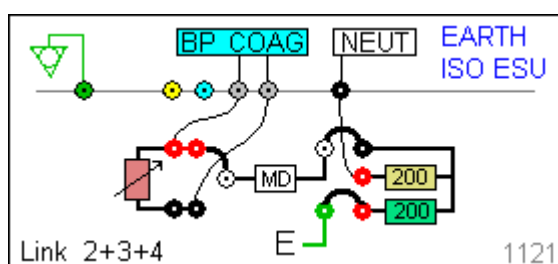


TEST CODE 1122

IEC 601-2-2 part 1, FIGURE 104 MEASUREMENT OF H.F. LEAKAGE CURRENT FROM A BIPOLAR ELECTRODE EARTH ISOLATED ESU BIPOLAR ELECTRODE **COAG** MODE SECOND ELECTRODE

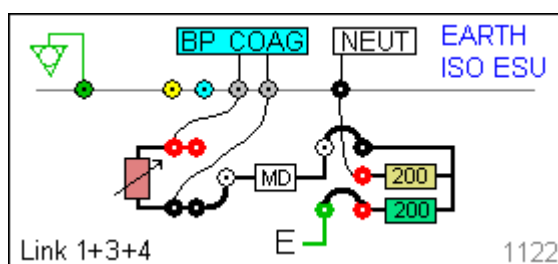


TEST CODE 1211


IEC 601-2-2 part 1 FIGURE 103 MEASUREMENT OF H.F. LEAKAGE CURRENT WITH NEUTRAL ELECTRODE ISOLATED FROM EARTH AT HIGH FREQUENCY EARTH ISOLATED ESU MONO-POLAR ELECTRODE **CUT** MODE ACTIVE ELECTRODE

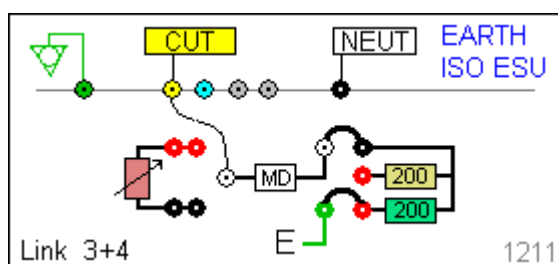


TEST CODE 1212
 IEC 601-2-2 part 1 FIGURE 103 MEASUREMENT OF H.F. LEAKAGE CURRENT WITH NEUTRAL ELECTRODE ISOLATED FROM EARTH AT HIGH FREQUENCY EARTH ISOLATED ESU MONO-POLAR ELECTRODE **CUT** MODE NEUTRAL ELECTRODE

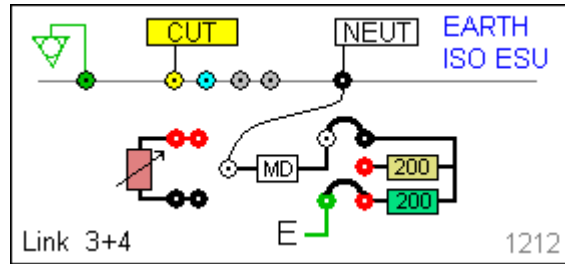


TEST CODE 1221
 IEC 601-2-2 part 1 FIGURE 103 MEASUREMENT OF H.F. LEAKAGE CURRENT WITH NEUTRAL ELECTRODE ISOLATED FROM EARTH AT HIGH FREQUENCY EARTH ISOLATED ESU MONO-POLAR ELECTRODE **COAG** MODE ACTIVE ELECTRODE

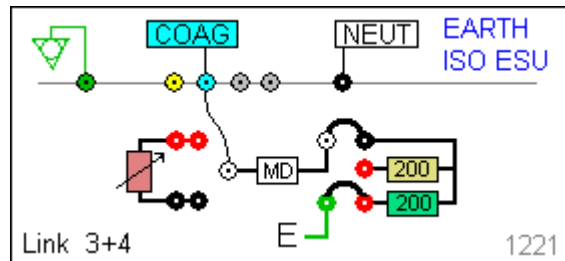

TEST CODE 1222
 IEC 601-2-2 part 1 FIGURE 103 MEASUREMENT OF H.F. LEAKAGE CURRENT WITH NEUTRAL ELECTRODE ISOLATED FROM EARTH AT HIGH FREQUENCY EARTH ISOLATED ESU MONO-POLAR ELECTRODE **COAG** MODE NEUTRAL ELECTRODE

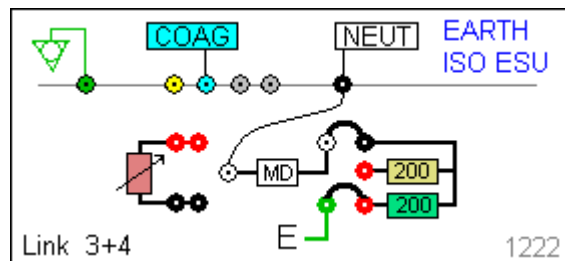


TEST CODE 2111
 IEC 601-2-2 part 1, FIGURE 104 MEASUREMENT OF H.F. LEAKAGE CURRENT FROM A BIPOLAR ELECTRODE EARTH 'REFERENCED ESU BIPOLAR ELECTRODE **CUT** MODE FIRST ELECTRODE

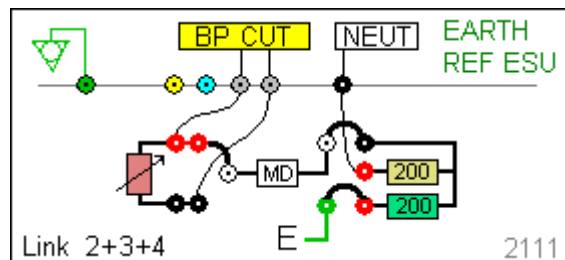


TEST CODE 2112

IEC 601-2-2 part 1, FIGURE 104 MEASUREMENT OF H.F. LEAKAGE CURRENT FROM A BIPOLAR ELECTRODE EARTH REFERENCED ESU BIPOLAR ELECTRODE **CUT** MODE SECOND ELECTRODE

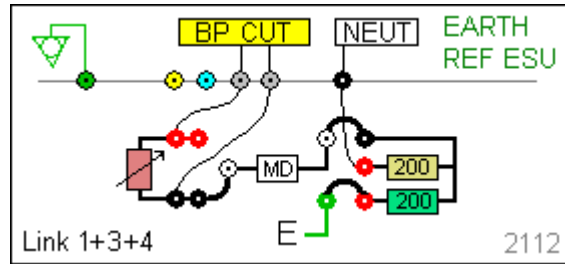


TEST CODE 2121

IEC 601-2-2 part 1, FIGURE 104 MEASUREMENT OF H.F. LEAKAGE CURRENT FROM A BIPOLAR ELECTRODE EARTH REFERENCED ESU BIPOLAR ELECTRODE **COAG** MODE FIRST ELECTRODE

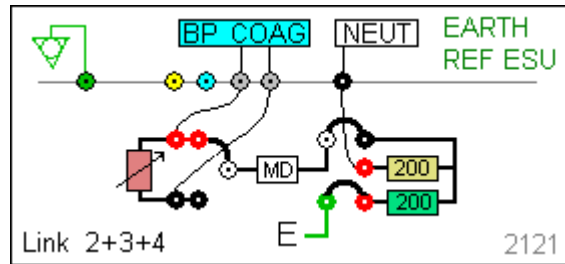


TEST CODE 2122

IEC 601-2-2 part 1, FIGURE 104 MEASUREMENT OF H.F. LEAKAGE CURRENT FROM A BIPOLAR ELECTRODE EARTH REFERENCED ESU BIPOLAR ELECTRODE **COAG** MODE SECOND ELECTRODE

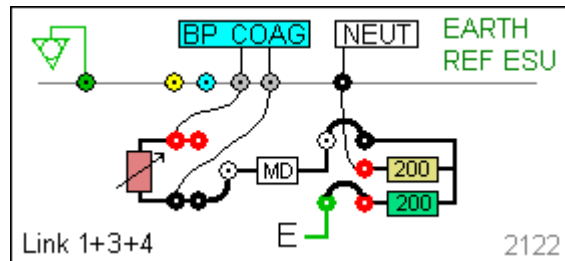


TEST CODE 2211

IEC 601-2-2 part 1 FIGURE 102 MEASUREMENT OF H.F. LEAKAGE CURRENT WITH NEUTRAL ELECTRODE REFERENCED TO EARTH AND LOAD FROM ACTIVE ELECTRODE TO EARTH EARTH REFERENCED ESU MONO-POLAR ELECTRODE **CUT** MODE ACTIVE ELECTRODE

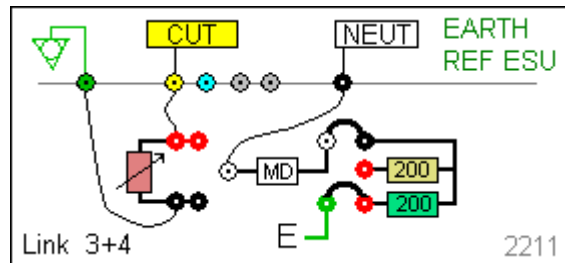

TEST CODE 2212


IEC 601-2-2 part 1 FIGURE 101 MEASUREMENT OF H.F. LEAKAGE CURRENT WITH NEUTRAL ELECTRODE REFERENCED TO EARTH AND LOAD BETWEEN ELECTRODES EARTH REFERENCED ESU MONO-POLAR ELECTRODE **CUT**

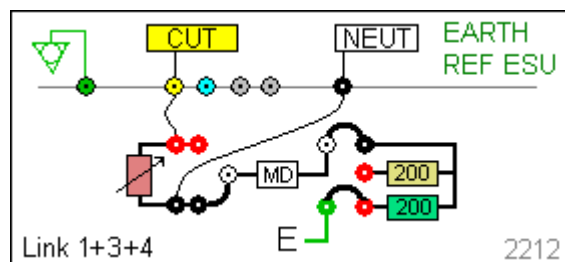

MODE NEUTRAL
ELECTRODE


TEST CODE 2221

IEC 601-2-2 part 1 FIGURE 102 MEASUREMENT OF H.F. LEAKAGE CURRENT WITH NEUTRAL ELECTRODE REFERENCED TO EARTH AND LOAD FROM ACTIVE ELECTRODE TO EARTH EARTH REFERENCED ESU MONO-POLAR ELECTRODE COAG MODE ACTIVE ELECTRODE

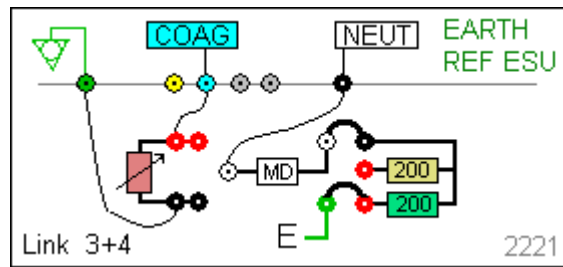

TEST CODE 2222


IEC 601-2-2 part 1 FIGURE 101 MEASUREMENT OF H.F. LEAKAGE CURRENT WITH NEUTRAL ELECTRODE REFERENCED TO EARTH AND LOAD BETWEEN ELECTRODES EARTH REFERENCED ESU MONO-POLAR ELECTRODE COAG MODE NEUTRAL ELECTRODE

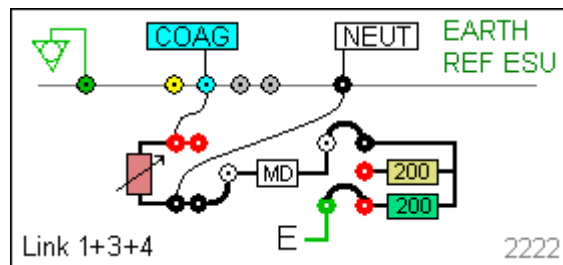

13 Appendix B Additional Leakage Tests


EST CODE 2113

IEC 601-2-2 part 1, FIGURE
N/A MEASUREMENT OF H.F.
LEAKAGE CURRENT FROM
A BIPOLAR ELECTRODE
EARTH ISOLATED ESU
BIPOLAR ELECTRODE **CUT**
MODE FIRST ELECTRODE

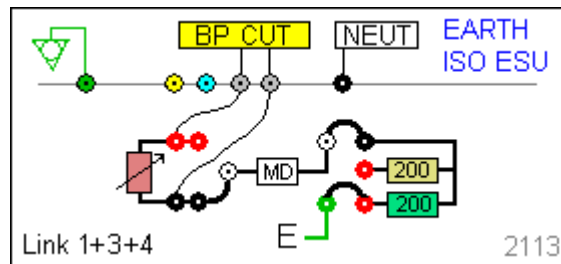


TEST CODE 2114

IEC 601-2-2 part 1, FIGURE
N/A MEASUREMENT OF H.F.
LEAKAGE CURRENT FROM
A BIPOLAR ELECTRODE
EARTH ISOLATED ESU
BIPOLAR ELECTRODE **CUT**
MODE FIRST ELECTRODE

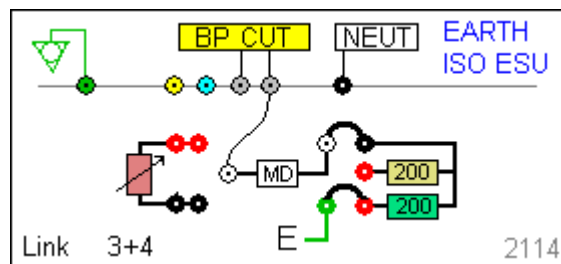


TEST CODE 2115

IEC 601-2-2 part 1, FIGURE
N/A MEASUREMENT OF H.F.
LEAKAGE CURRENT FROM
A BIPOLAR ELECTRODE
EARTH ISOLATED ESU
BIPOLAR ELECTRODE **CUT**
MODE FIRST ELECTRODE

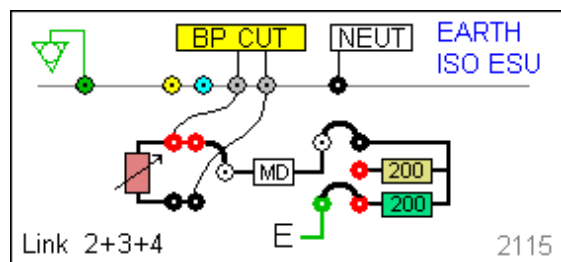


TEST CODE 2213

IEC 601-2-2 part 1 FIGURE
N/A MEASUREMENT OF H.F.
LEAKAGE CURRENT WITH
NEUTRAL ELECTRODE
REFERENCED TO EARTH
AND LOAD BETWEEN
ELECTRODES EARTH
REFERENCED ESU MONO-
POLAR ELECTRODE **CUT**
MODE NEUTRAL
ELECTRODE

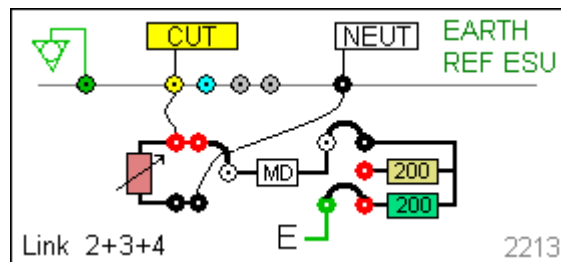


TEST CODE 2223
 IEC 601-2-2 part 1 FIGURE
 N/A MEASUREMENT OF H.F.
 LEAKAGE CURRENT WITH
 NEUTRAL ELECTRODE
 REFERENCED TO EARTH
 AND LOAD BETWEEN
 ELECTRODES EARTH
 REFERENCED ESU MONO-
 POLAR ELECTRODE **COAG**
 MODE NEUTRAL
 ELECTRODE

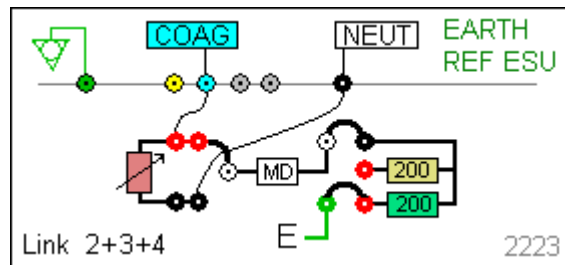

14 Appendix C IEC 60601-2-2 Power Tests


TEST CODE 0110

IEC 601-2-2 part 1 FIGURE 106 MEASUREMENT OF OUTPUT POWER BI-POLAR OUTPUT USER SET LOAD RESISTANCE BI-POLAR ELECTRODE **CUT** MODE BOTH ELECTRODES

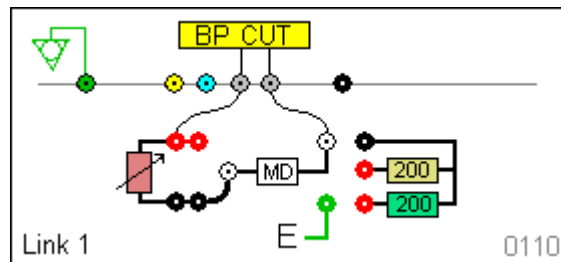


TEST CODE 0120

IEC 601-2-2 part 1 FIGURE 106 MEASUREMENT OF OUTPUT POWER BI-POLAR OUTPUT USER SET LOAD RESISTANCE BI-POLAR ELECTRODE **COAG** MODE BOTH ELECTRODES

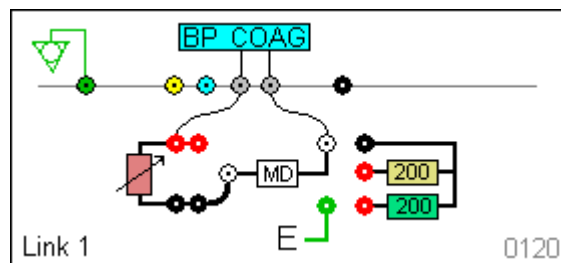


TEST CODE 0210

IEC 601-2-2 part 1 FIGURE 105 MEASUREMENT OF OUTPUT POWER MONO-POLAR OUTPUT USER SET LOAD RESISTANCE MONO-POLAR ELECTRODE **CUT** MODE ACTIVE AND NEUTRAL ELECTRODE

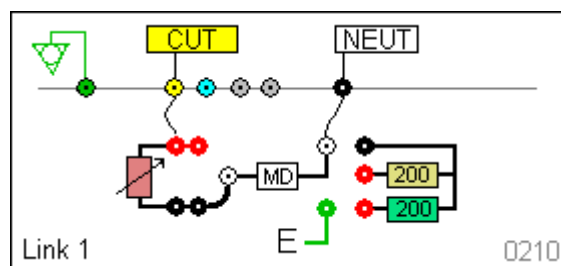

TEST CODE 0220

IEC 601-2-2 part 1 FIGURE 105 MEASUREMENT OF OUTPUT POWER MONO-POLAR OUTPUT USER SET LOAD RESISTANCE MONO-POLAR ELECTRODE **COAG** MODE ACTIVE AND NEUTRAL ELECTRODE

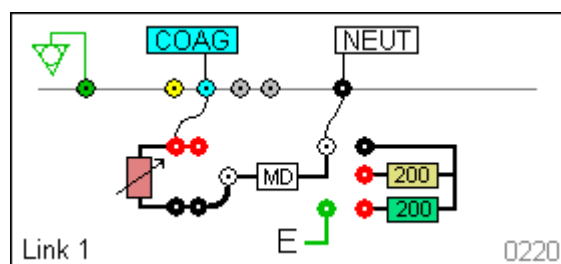

15 Appendix D Creating a power reference curve

[REFGRAPH]

Upper curv	10
25	35
100	290
175	290
250	290
325	290
400	290
475	290
550	290
625	260
700	220

[END]

The Rigel Uni-Therm is able to automatically compare the measured power distribution graph against a preset template or reference curve. You will require two reference curves, one for the upper and one for the lower limits.

Open the file 'refgraphtemplate.csv' available at:

<http://www.rigelmedical.com/rigel-downloads?id=Application>

Notes


[REFGRAPH] and **[END]** must remain at the beginning and end of the file. "Upper Curve" is the name of the graph and can be changed. This will be the name of your graph once uploaded to the Rigel Uni-Therm.

10 is the number of points on the graph, this can be changed but the lines of data must reflect this number.

Column A is the X axis, and represents the Load (Ω). **Column B** is the Y axis and represents the Power (W). In this example, line 3 is a plot of 25W at 35 Ω .

Once you have completed plotting the points in the CSV file, select File and then Save As. Save the file with a recognisable name including RefGraph and with a .sss extension, e.g. RefGraph.sss.


A Rename message should appear as you have changed the file extensive from csv to sss

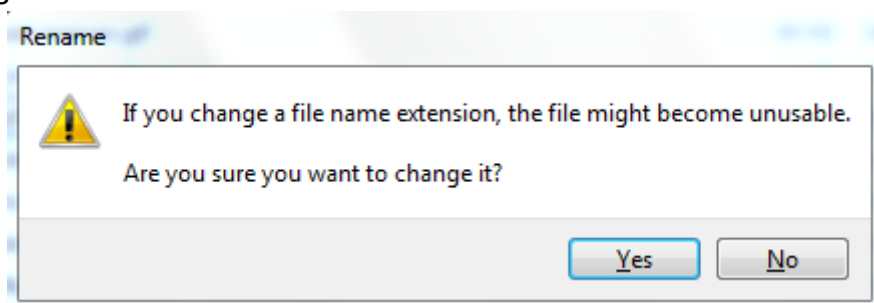



Follow the instructions in [this manual](#) to upload the reference graphs;

To use the uploaded reference curves, go to MENU / SETUP / TEST SEQUENCES. Then either add a new test sequence, or edit an existing test sequence as covered in [this manual](#).

Once you have added a Power Graph test. Highlight the test and select EDIT / REF GRAPH and UPPER or LOWER. Highlight the correct file and SELECT. This will set the new file as the upper or lower limit of the graph.

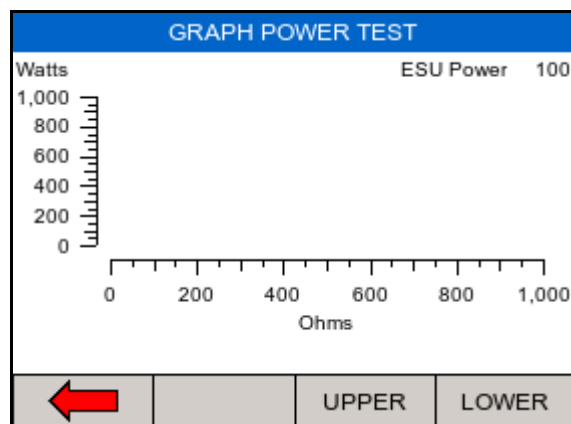

Select the UPPER and LOWER limit graphs by pressing UPPER and LOWER respectively and select the corresponding graphs;

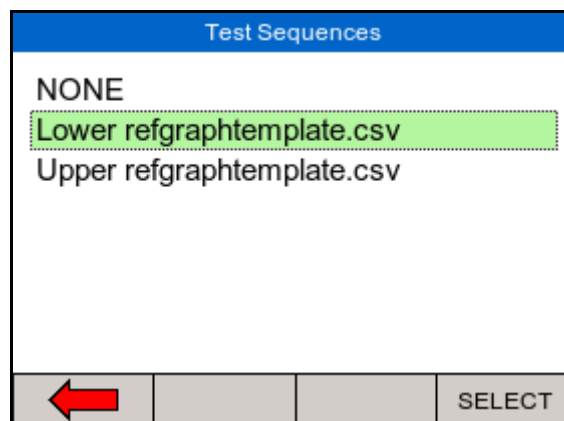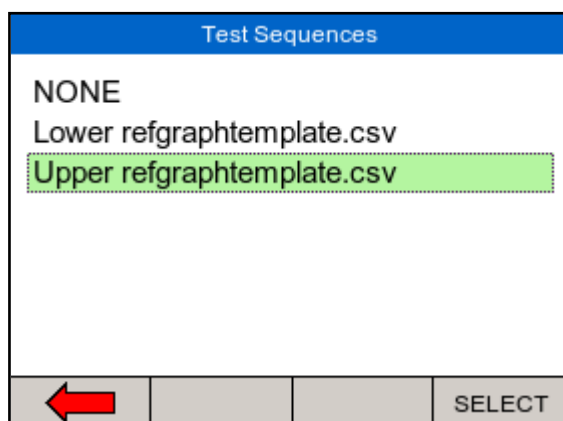

16 Appendix E Firmware Route Map

Menu			
	Auto Mode		
	Data		
		View Data	View test results
		Transfer Date	Download and upload results
			Import reference curves
		BT Favourites	Pair PC and barcode scanners
	Setup		
		Test Sequences	View, create and edit test sequences
		Time Date	Change time and date settings
		Language	Change language settings
		Factory Restore	Restore instrument to factory default
		About	View firmware revision and serial number.
REM test			Manual testing of the REM function
HF Leakage			Manual testing of the HF leakage
Power			Manual testing of the Power output