

How do I update the firmware on SafeTest 50 and 60?

Equipment required

The following equipment is required for this procedure:

1. PC with VCOM driver installed

2. USB A to micro-USB cable

3. SafeTest Firmware & Utility downloadable from http://www.rigelmedical.com/SafeTestFirmware. Extract to a location on your machine

SafeTest unit Firmware update procedure

Note: Turn the SafeTest unit off and remove the mains power cord to the unit before starting.

Preparing the SafeTest unit for update

a) Connect SafeTest unit to PC with USB A to micro-USB cable as indicated in Figure 1. Do not connect to PC yet



Figure 1. Application Update Setup with assembled unit

b) Press and hold F2 BUTTON while inserting other end of the USB cable into your PC. This powers the unit up in update mode. The unit should generate a double beep and the screen will remain blank.

c) Release button F2.

Firmware Update procedure from PC

A. Open the EST_FW_Updater_Vx_x.exe on the PC.

NOTE: The Vx_x indicates the current version. At time of writing the current version was $V0_3$

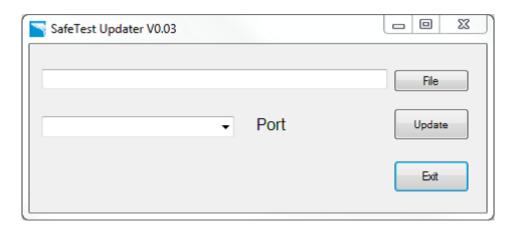


Figure 2. SafeTest FW_Updater program start screen

B. Select the Port to use. (In this guide, it is COM7, but it can change in each computer)

NOTE: To find the correct COM port, disconnect the PCB and check which port disappears, connect again, and select the new COM port which

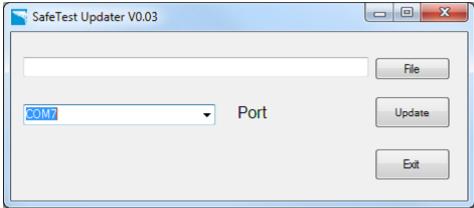


Figure 3. SafeTest_FW_Updater program with COM port selected

C. Click on the File button and navigate to the binary file folder in the new window:


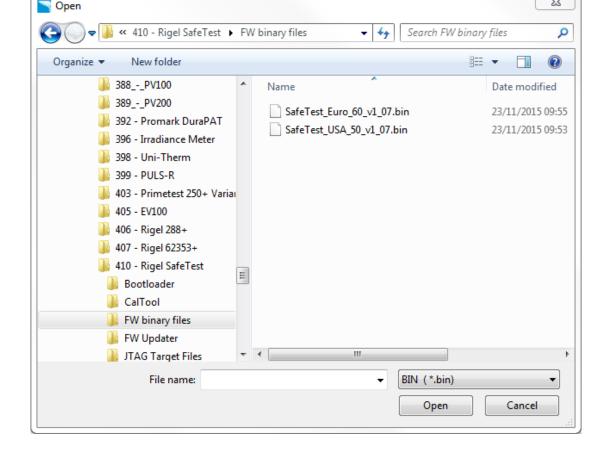


Figure 4. Window to select the binary file

- D. Select the Firmware data file for the appropriate unit from the approved firmware directory:
 - a. For the SafeTest 60: SafeTest_Euro_60_vx_xx.bin
 - b. For the SafeTest 50: SafeTest_USA_50_vx_xx.bin
- NOTE: The Vx_x indicates the current version. At time of writing the current version was V1_07.

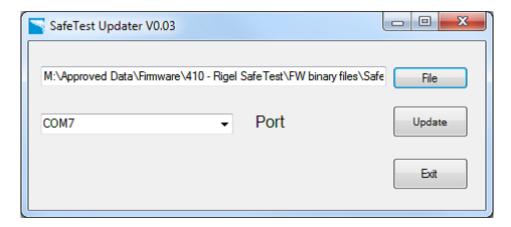

E. Click the Update but the Theorem will have the file has been sent.

File Sent, Check the Unit is updated

OK

Figure 6. SafeTest_FW_Updater program - Data sent confirmation window

- F. After the unit writes the Firmware correctly, it will generate a SINGLE BEEP. If the unit generates a double beep, repeat step D.
- G. To update another unit, disconnect the USB lead and connect to the next unit, go back to step 5.1.
 - H. Click the button Exit to close the Firmware updater application.
 - I. After the single beep, the unit will turn on the screen and show the next screen.

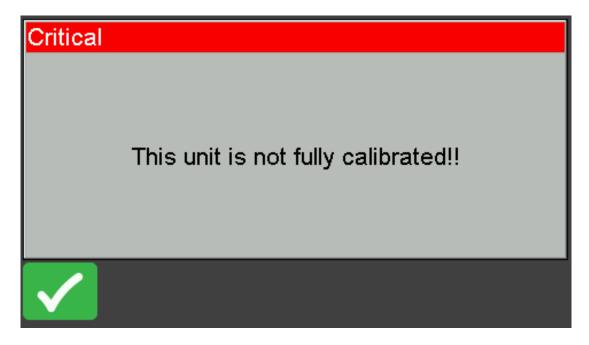


Figure 6. Application Update Setup with assembled unit

K. NOTE: This screen can change in future versions or if it has been used in different language.
If you require more help, please contact us at https://www.seaward.com/gb/enquire/ .